

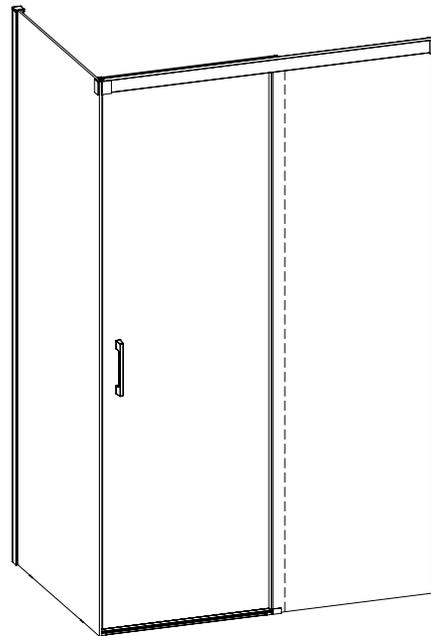
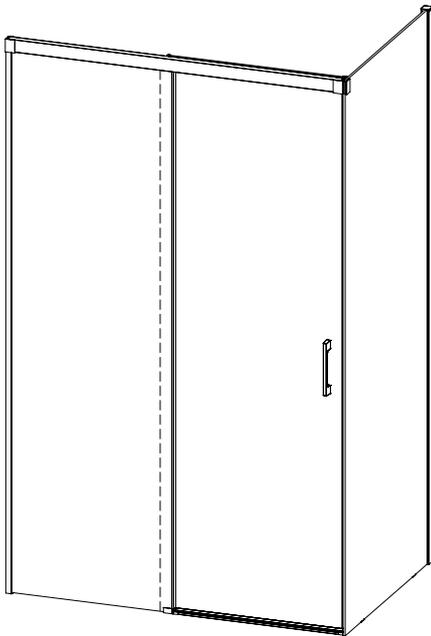
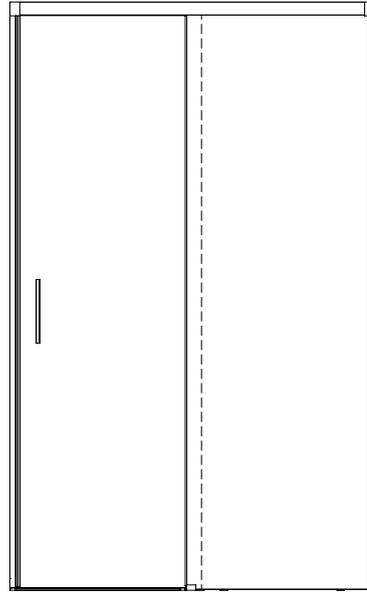


FL-PEG-ST-002

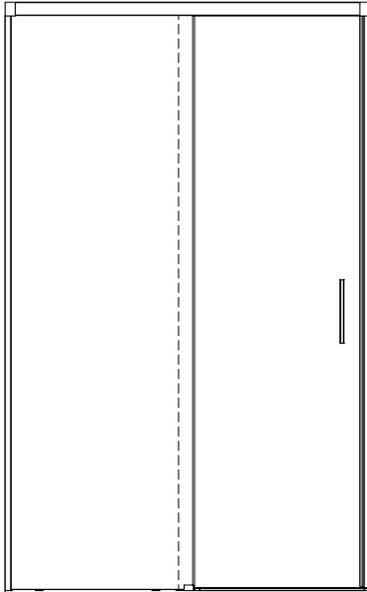


// MAMPARA DE BAÑO // PAROIS DE DOUCHE // SHOWER ENCLOSEURE //
// CABINA DOCCIA // DUSCHABTRENNUNG // RESGUARDO DE DUCHE //



M-01
x1

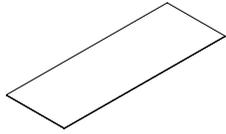


M-12
x1




M-23
x1

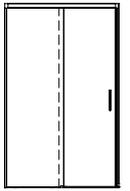

M-02
x1

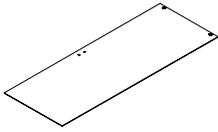


M-13
x2



M-24
x2



M-03
x1



M-14
x1




M-25
x1




M-04
x1




M-15
x1




M-26
x2



M-05
x1

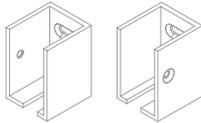


M-16
x1




M-27
x7



M-06
x1

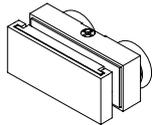


M-17
x1




M-28
x7




M-07
x1

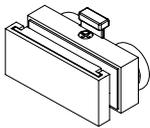


M-18
x1




M-29
x1

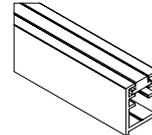

M-08
x1




M-19
x1




M-30
x1



M-09
x1




M-20
x2




M-10
x1




M-21
x1


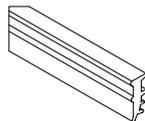


M-11
x1




M-22
x2




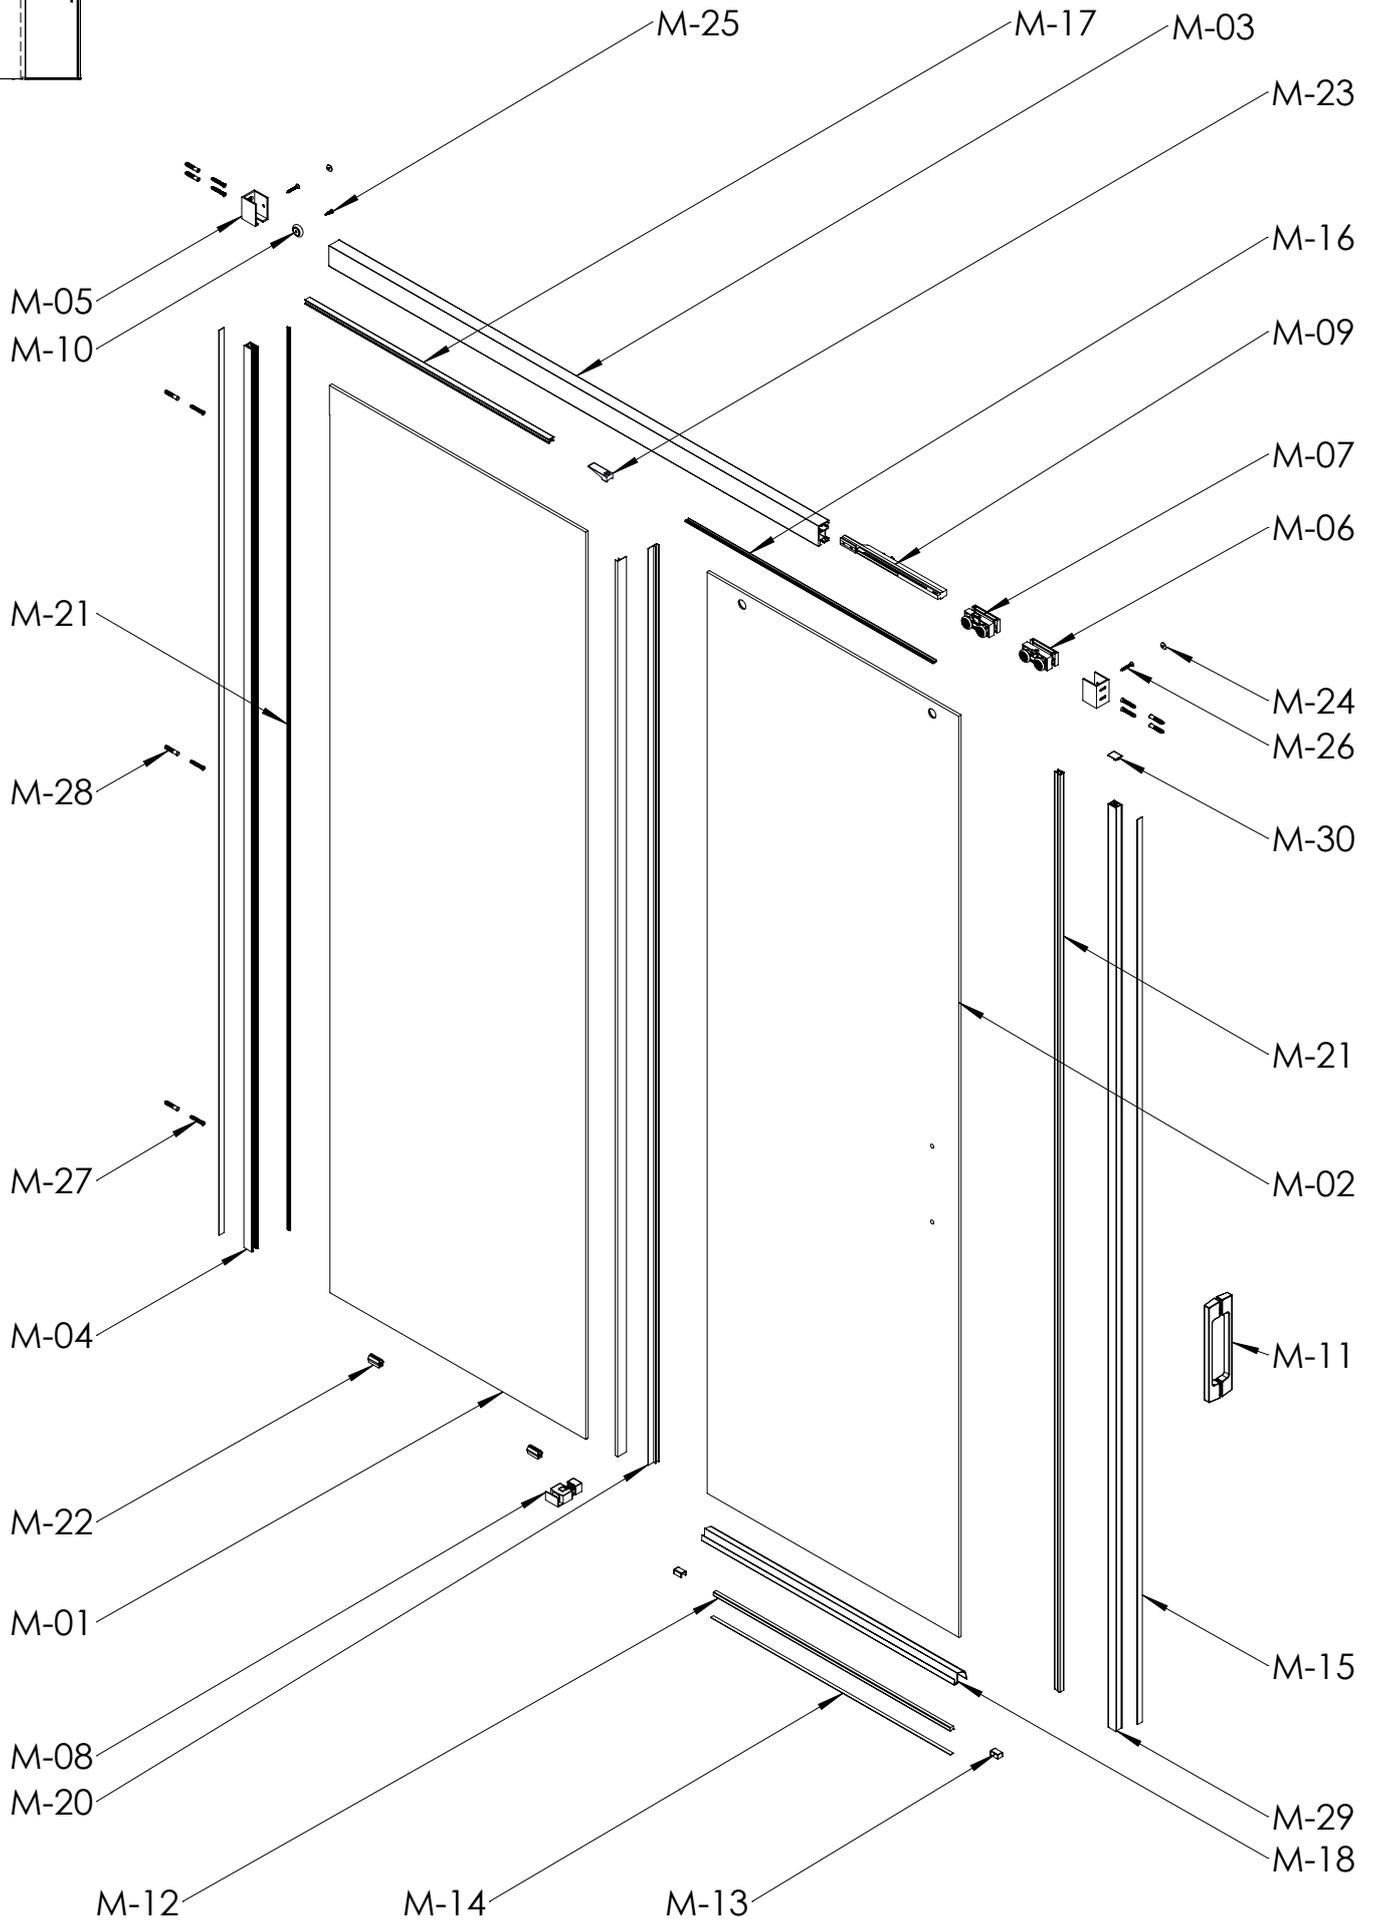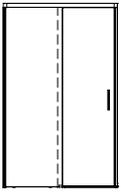



M-01
x1

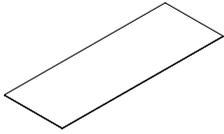


M-12
x1




M-23
x1

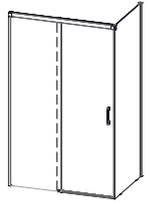

M-02
x1

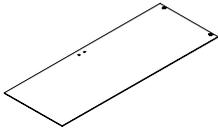


M-13
x2



M-24
x2



M-03
x1



M-14
x1



M-25
x1




M-36
x3




M-04
x1



M-15
x1




M-26
x2




M-37
x2




M-05
x1

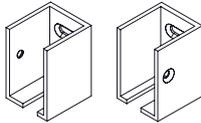


M-16
x1




M-27
x8




M-38
x2



M-06
x1

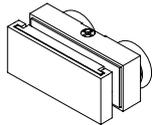


M-17
x1




M-28
x8




M-07
x1

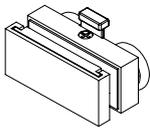


M-18
x1




M-31
x1

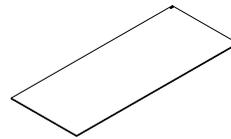


M-08
x1




M-19
x1




M-32
x1




M-09
x1



M-20
x2




M-33
x1



M-10
x1




M-21
x1

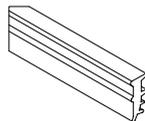


M-34
x1




M-11
x1





M-22
x2





M-35
x1





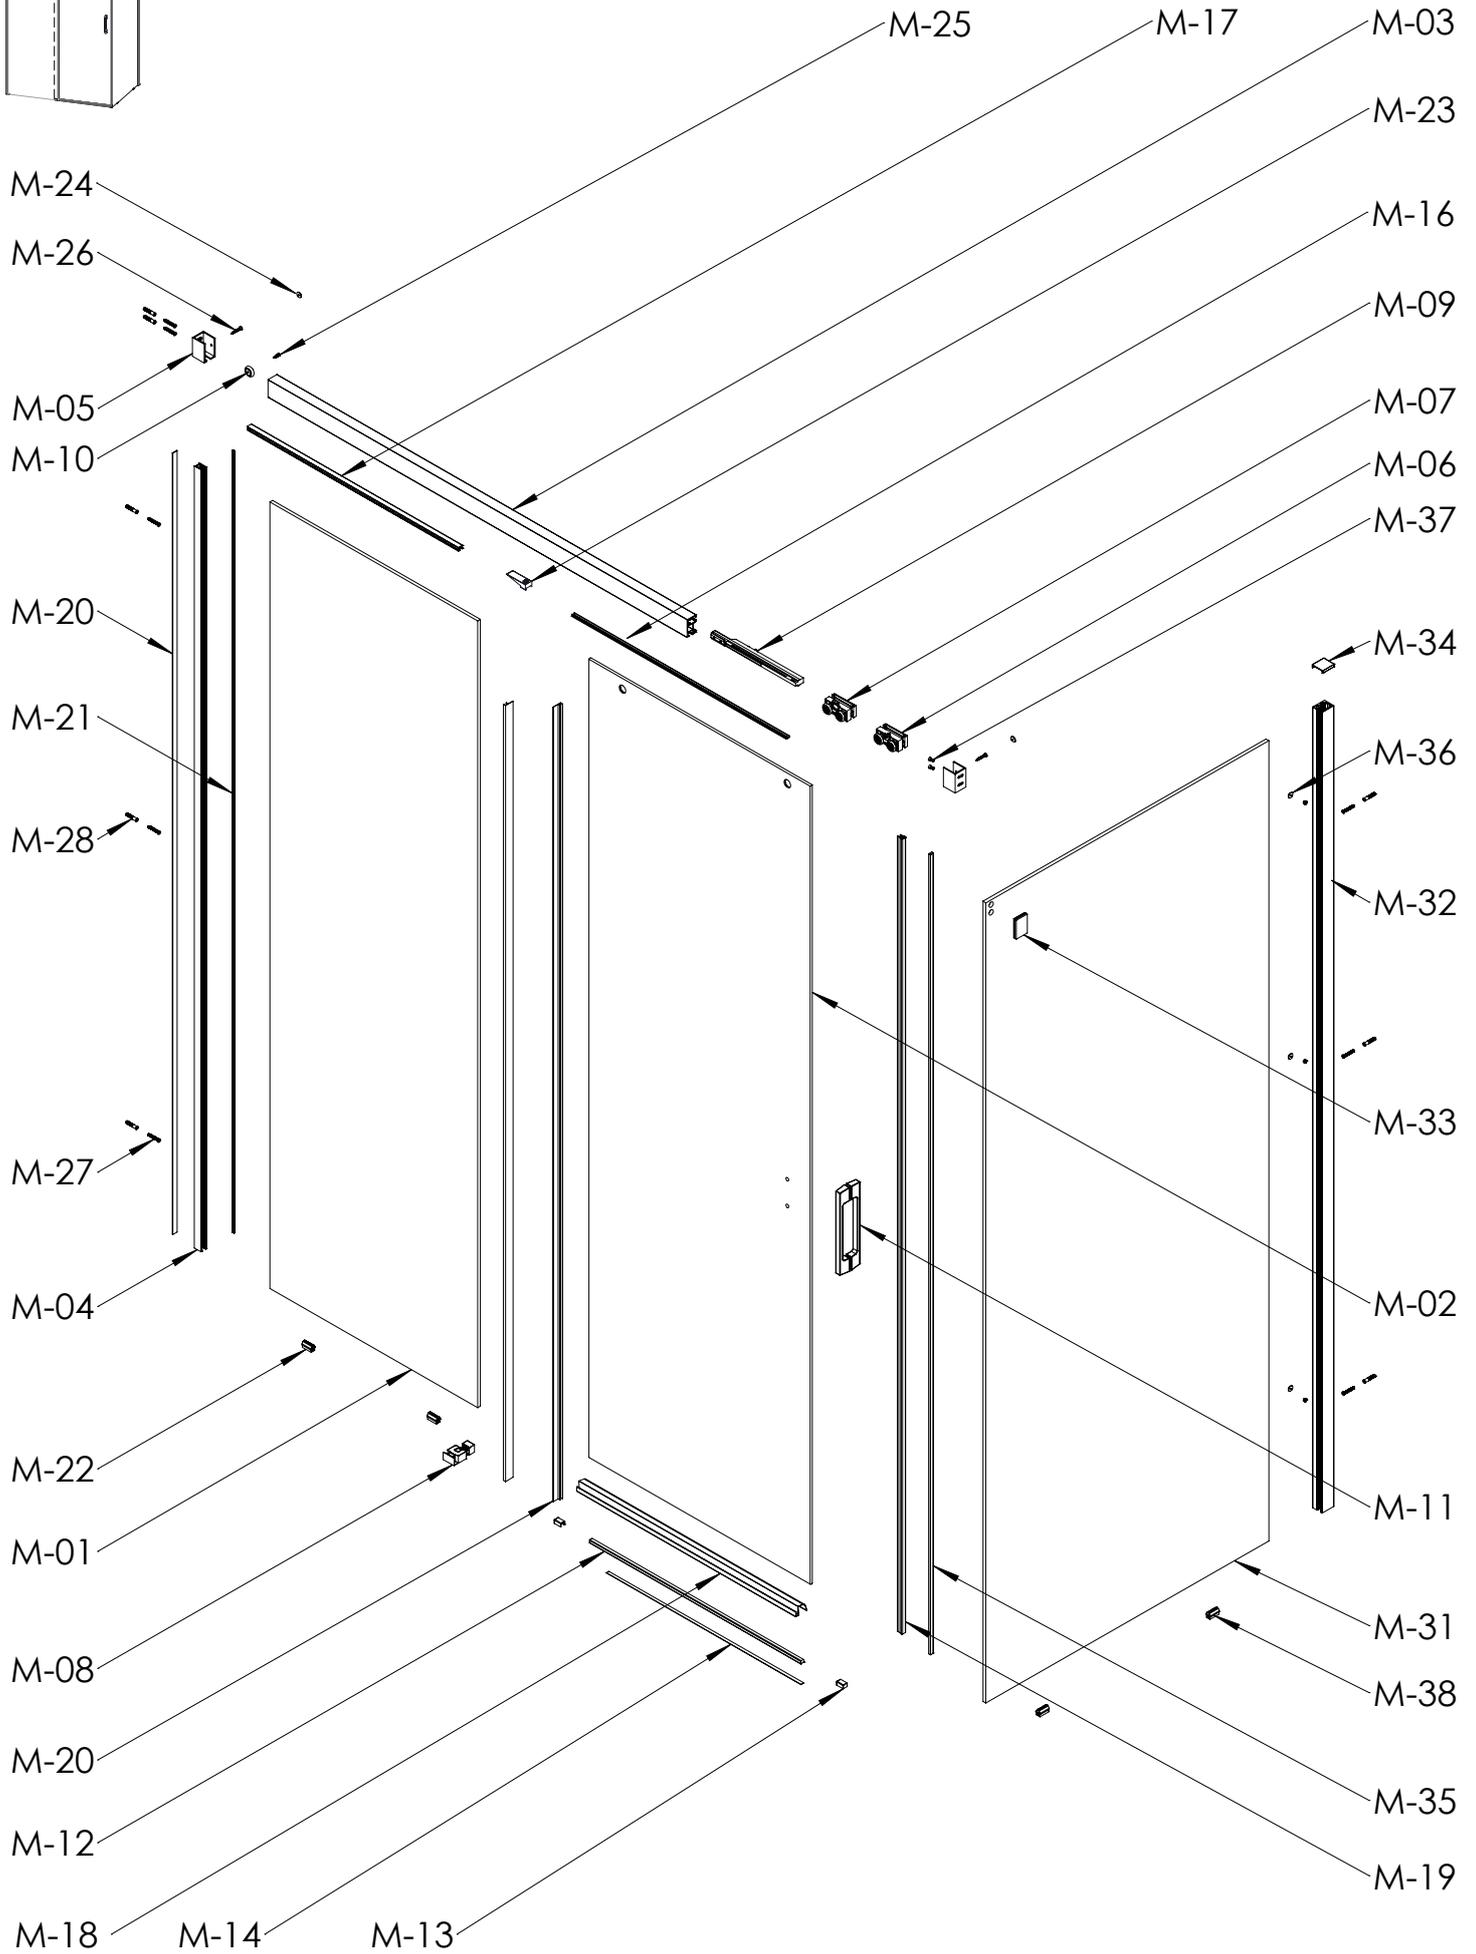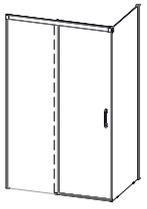


1 A Montaje con cinta de doble cara Double sided tape assembly

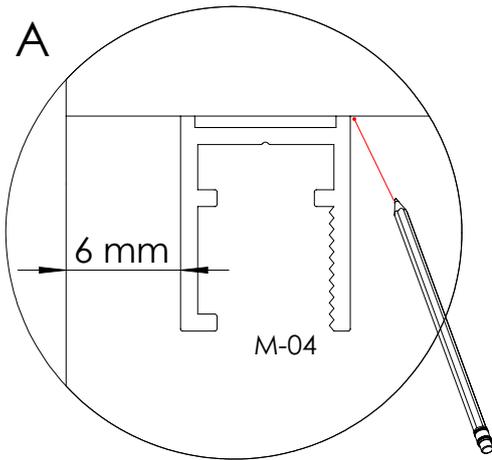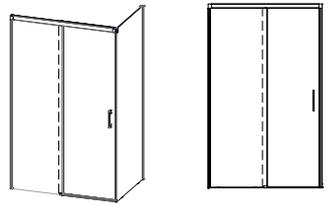


A.1

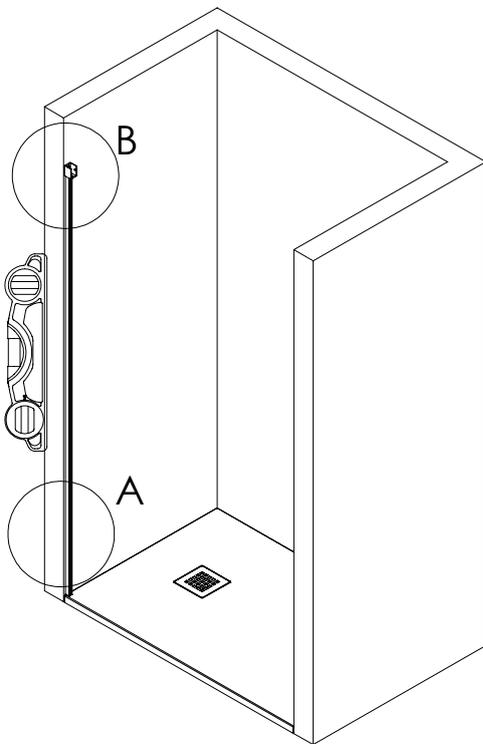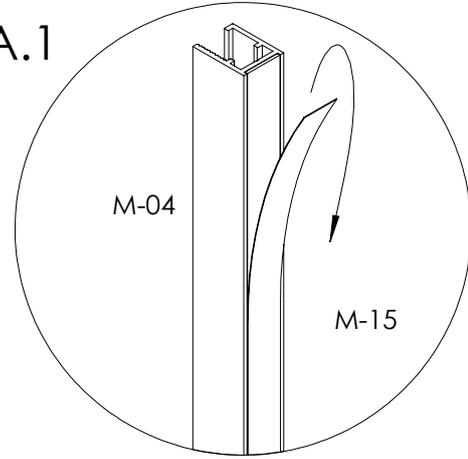


A.2

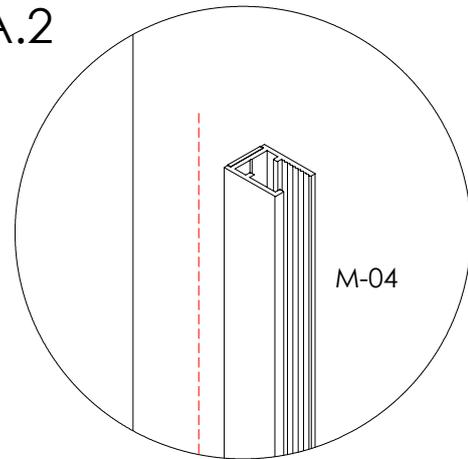

B.2


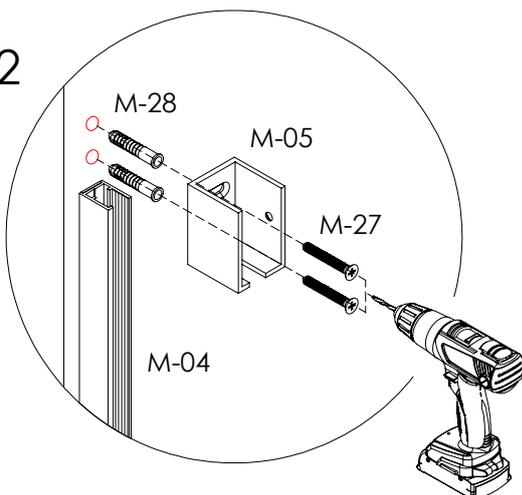


B.1


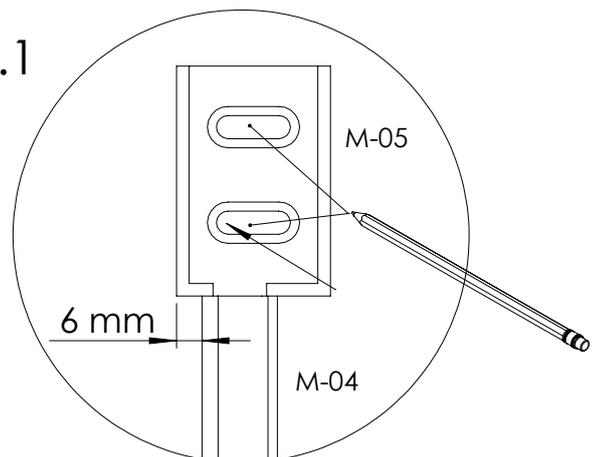


1 B


Montaje atornillado
Screwing assembly

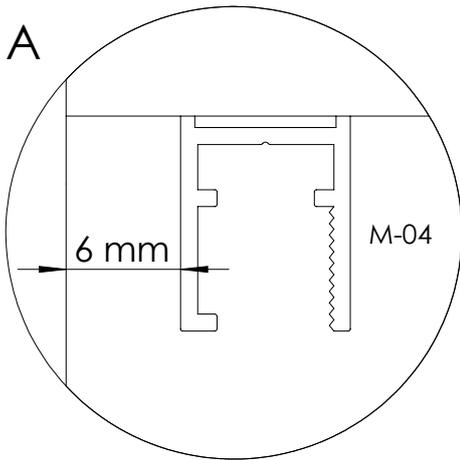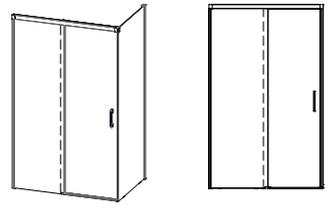


A.1

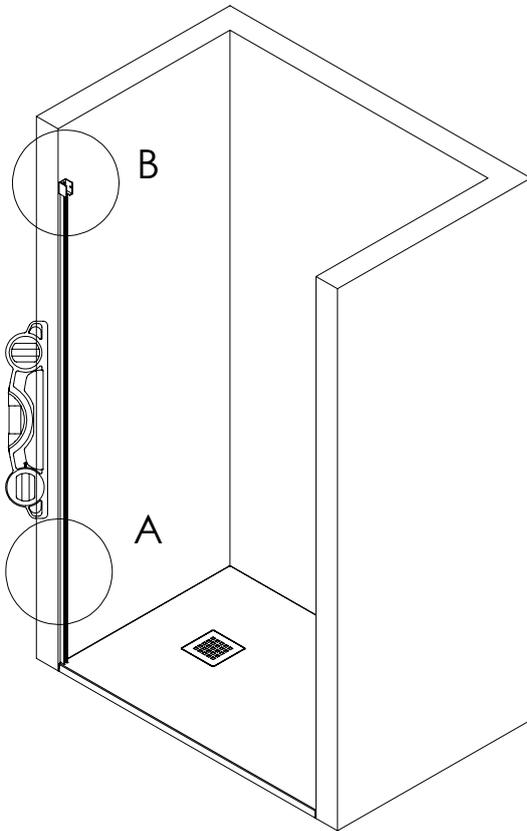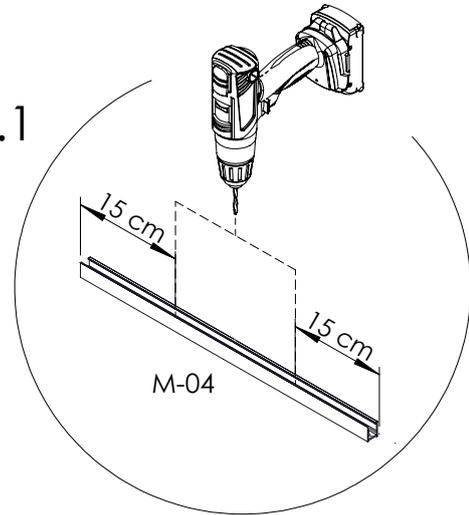


A.2

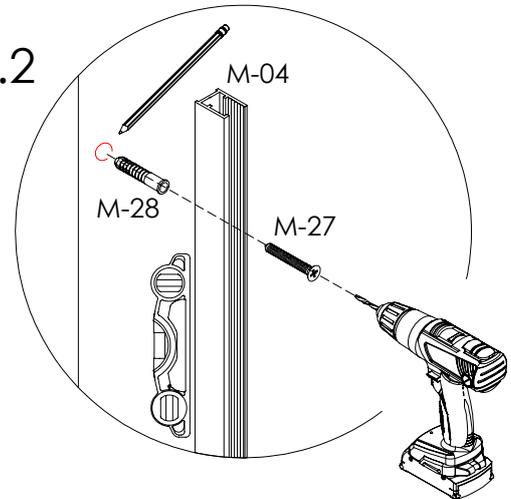

B.2


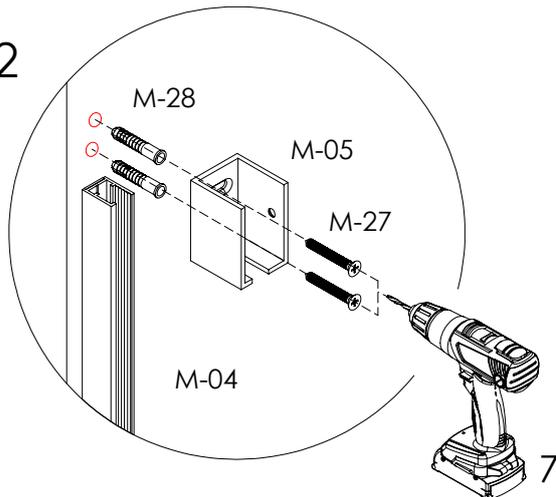


B.1


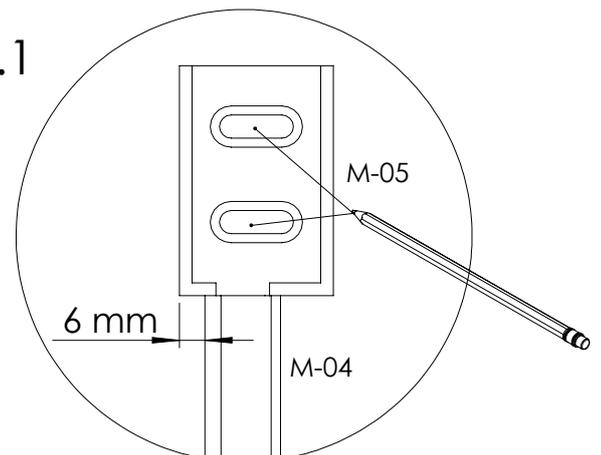


2


A.1

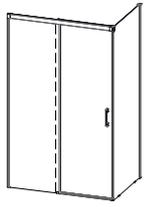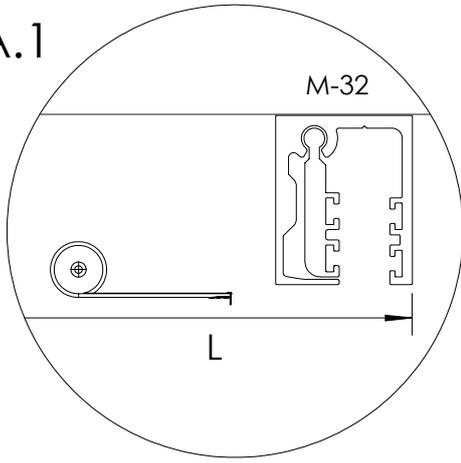


A.2

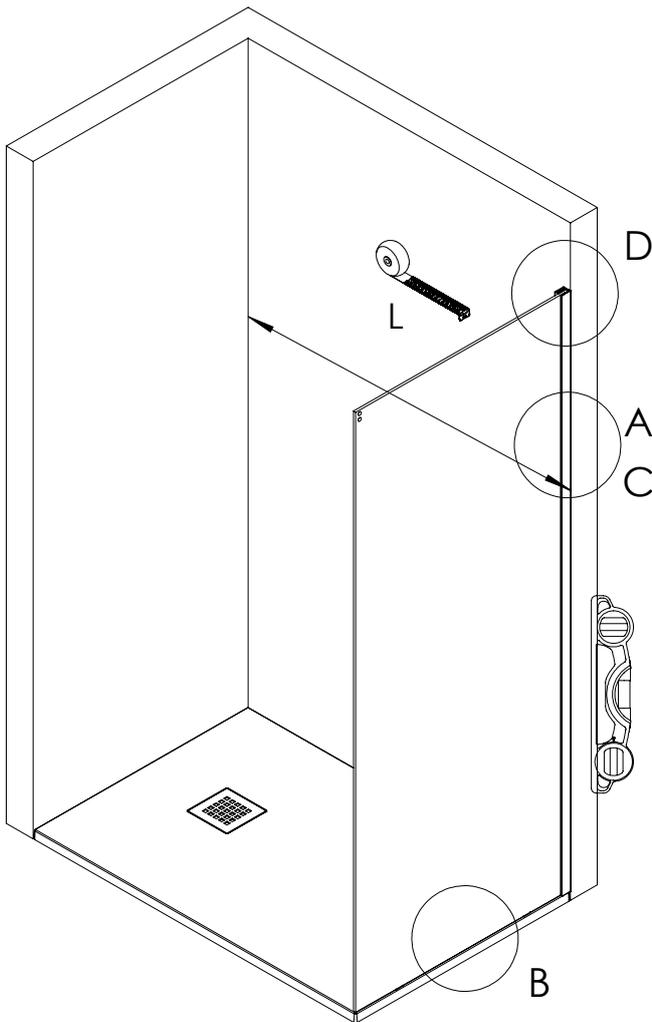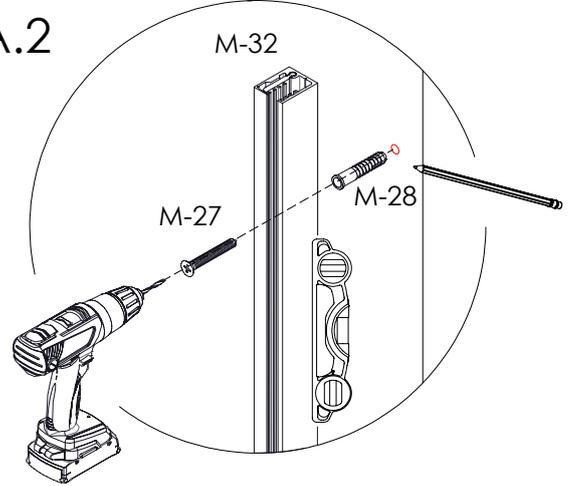


B

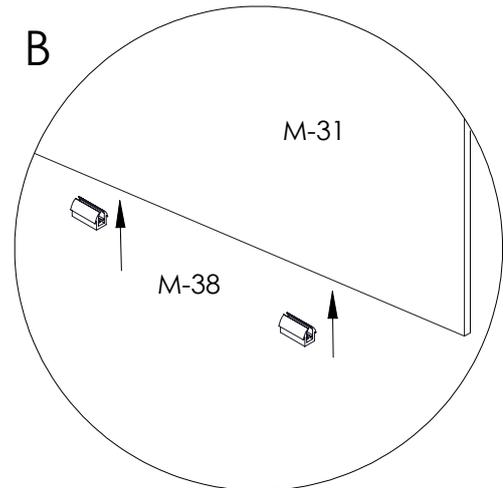


C

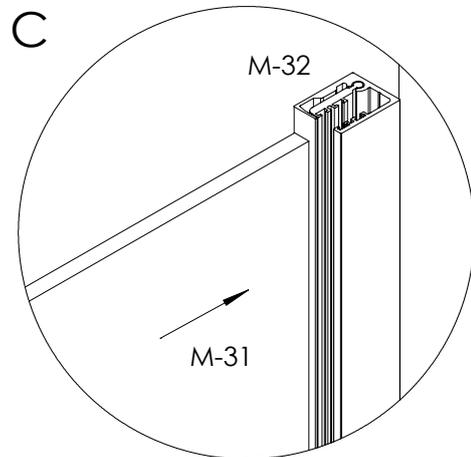



3

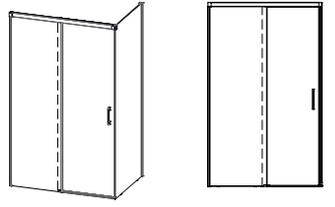


A.1

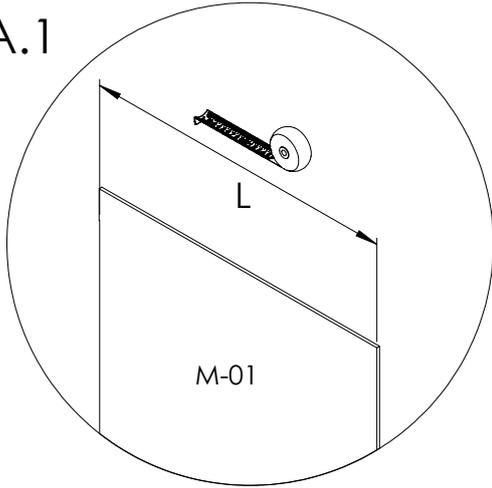


A.2

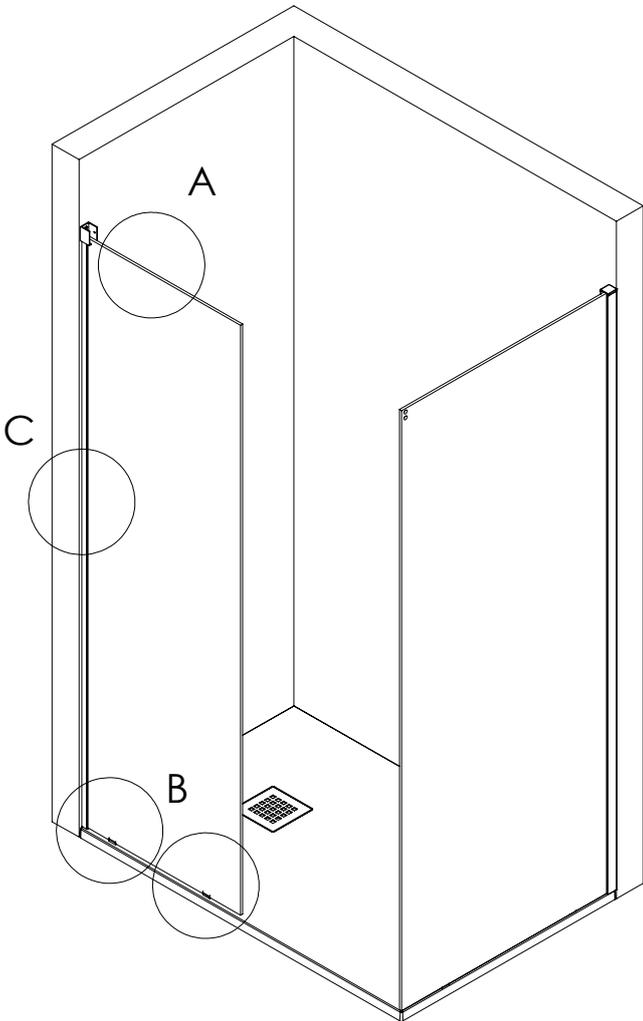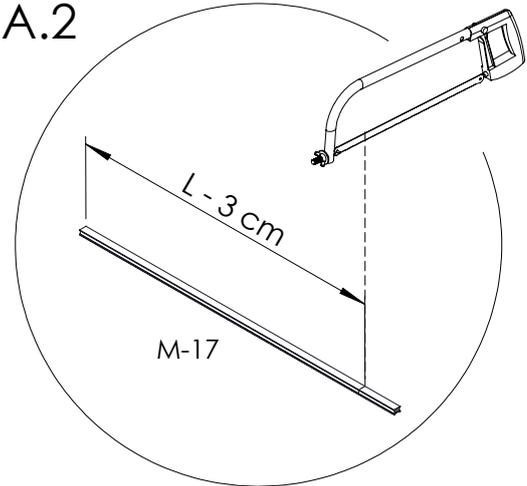


B

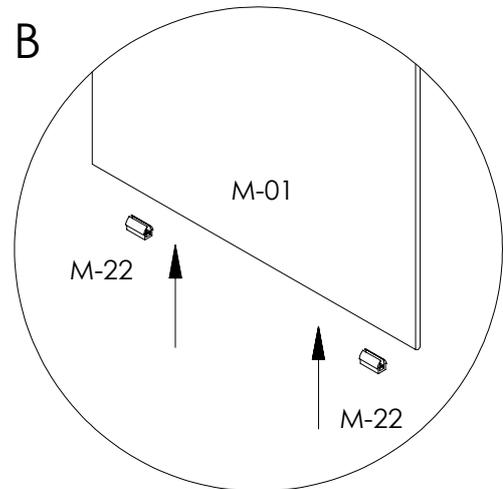


C

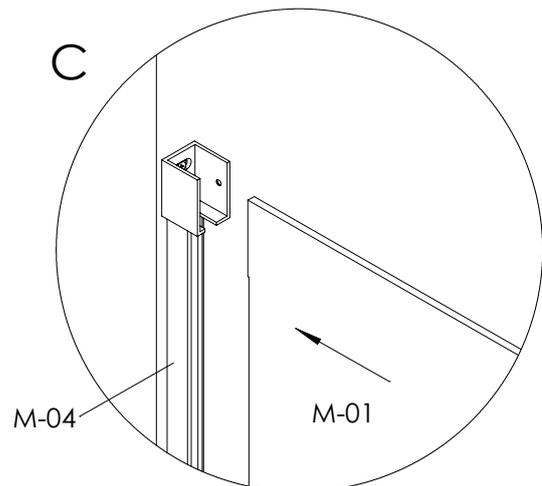








4

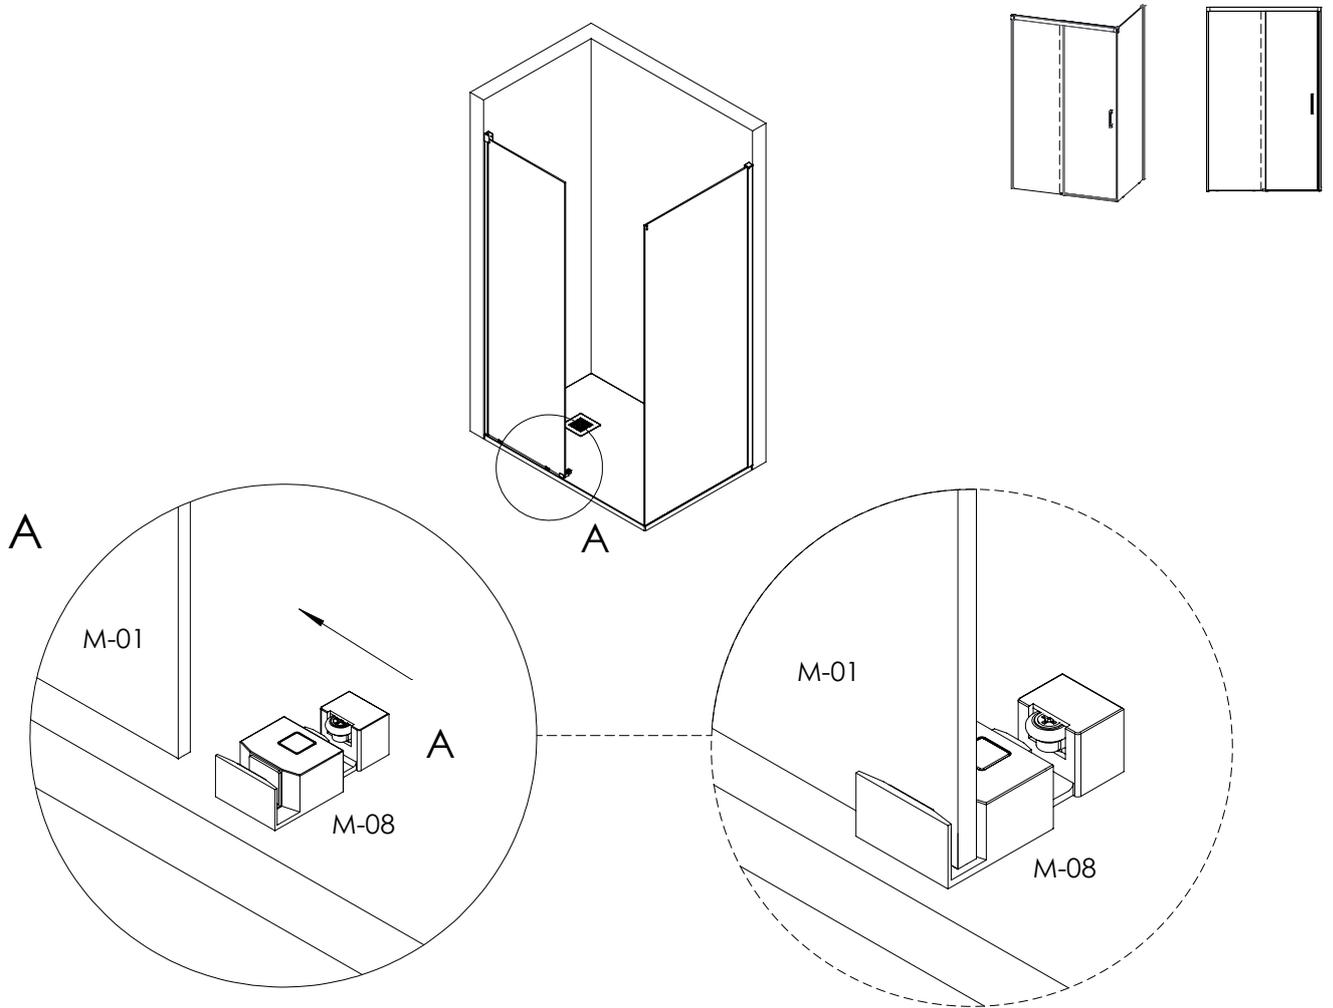






4

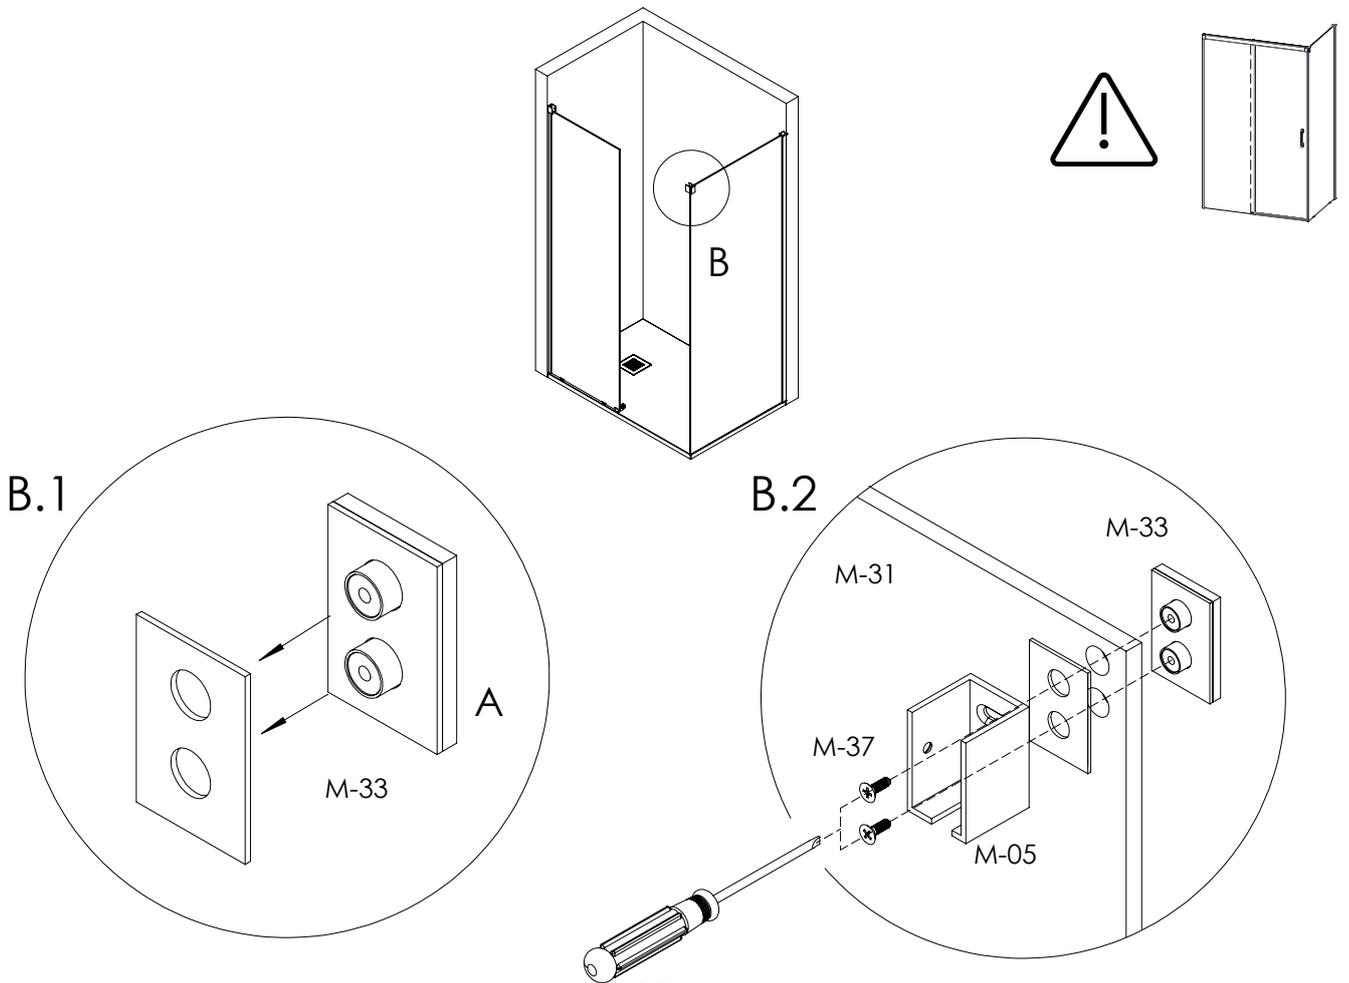








5

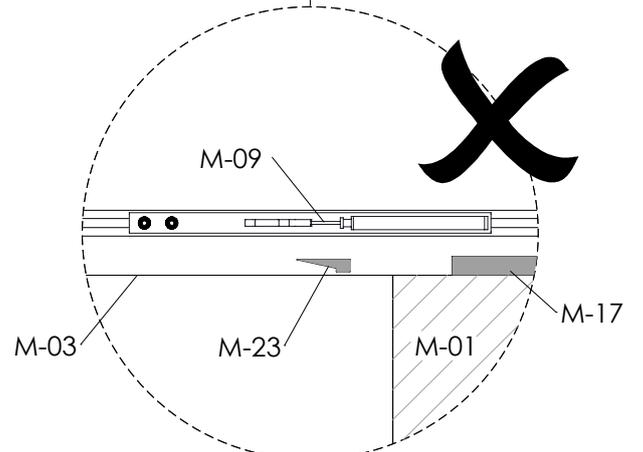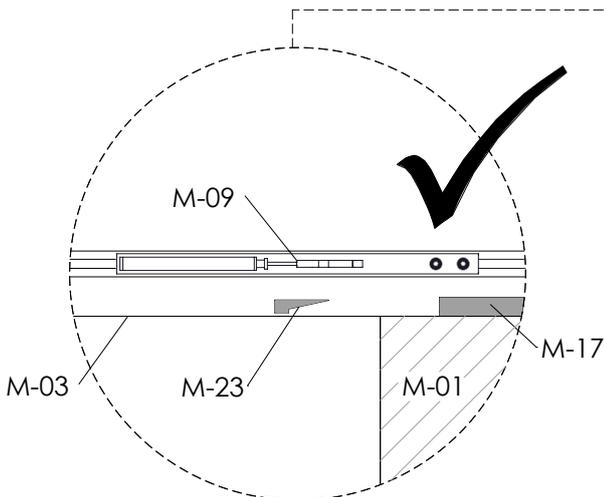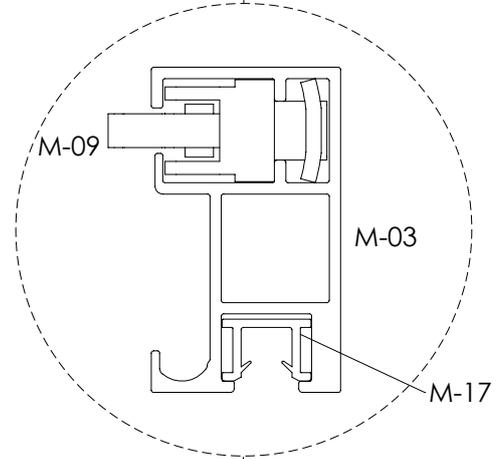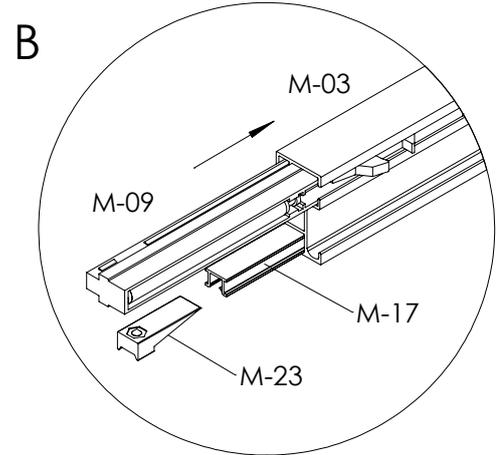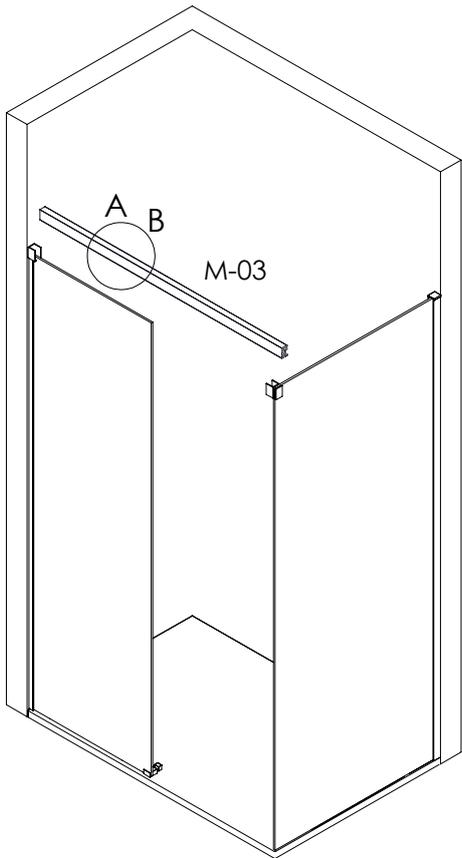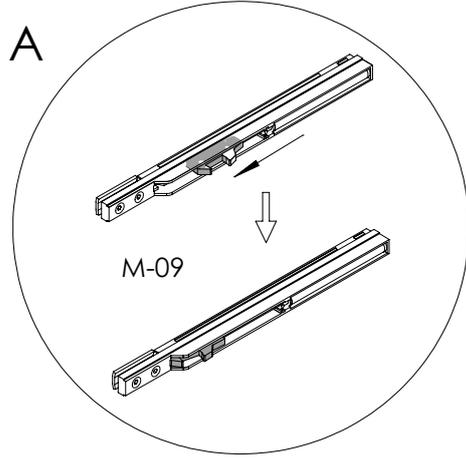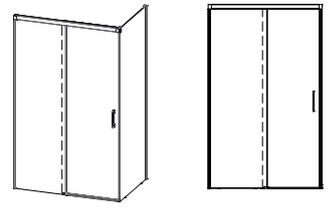








6

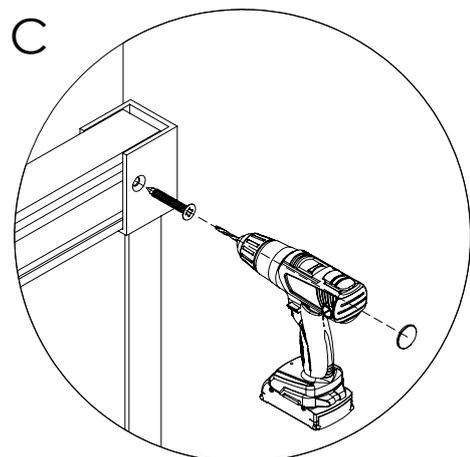
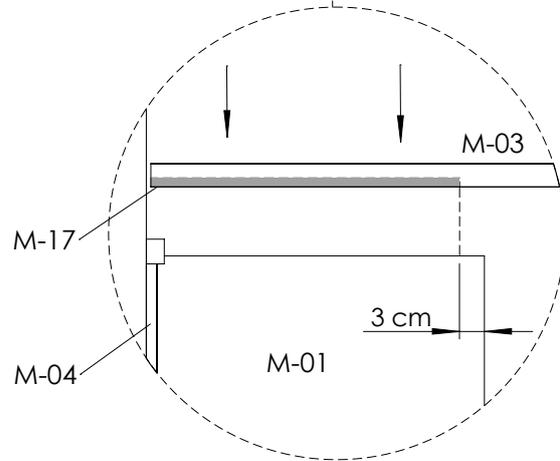
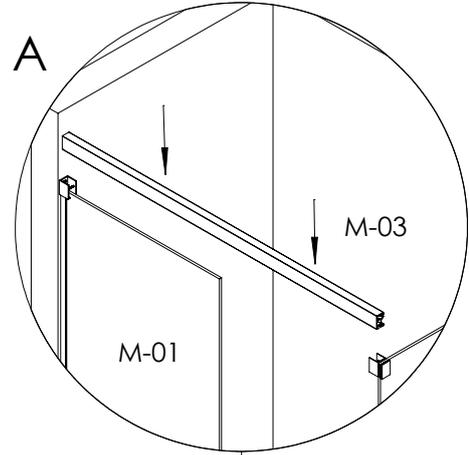
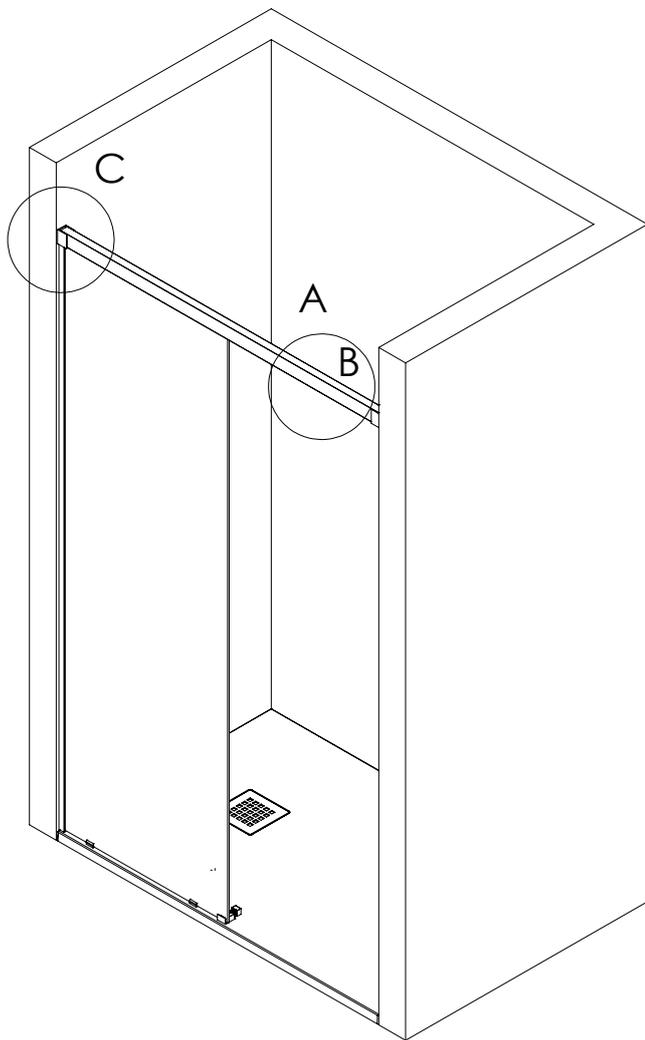
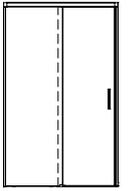


6

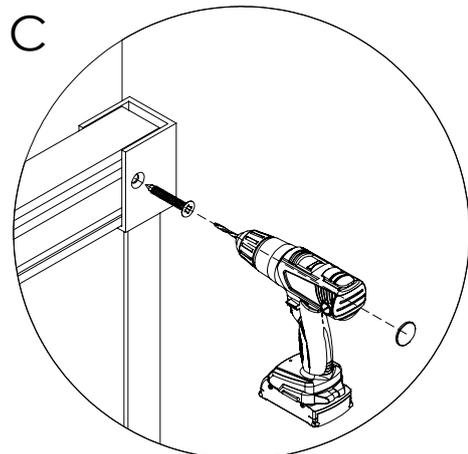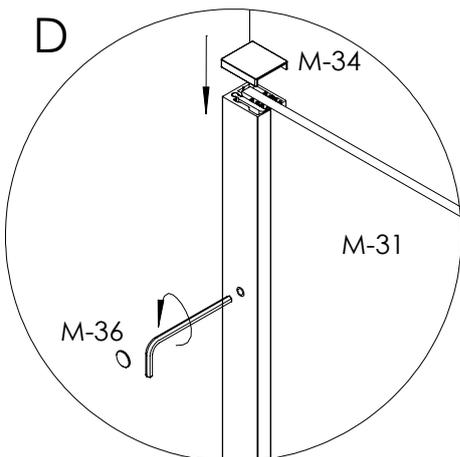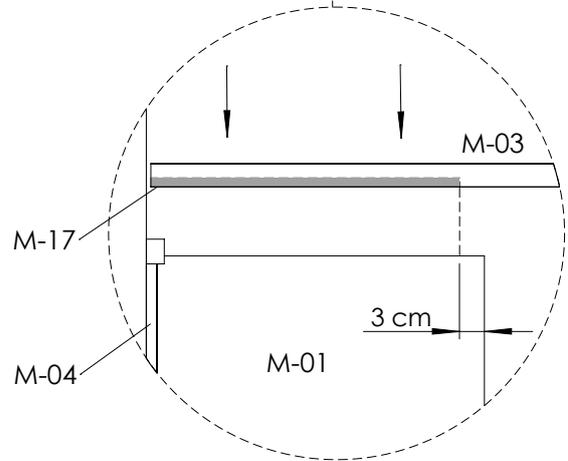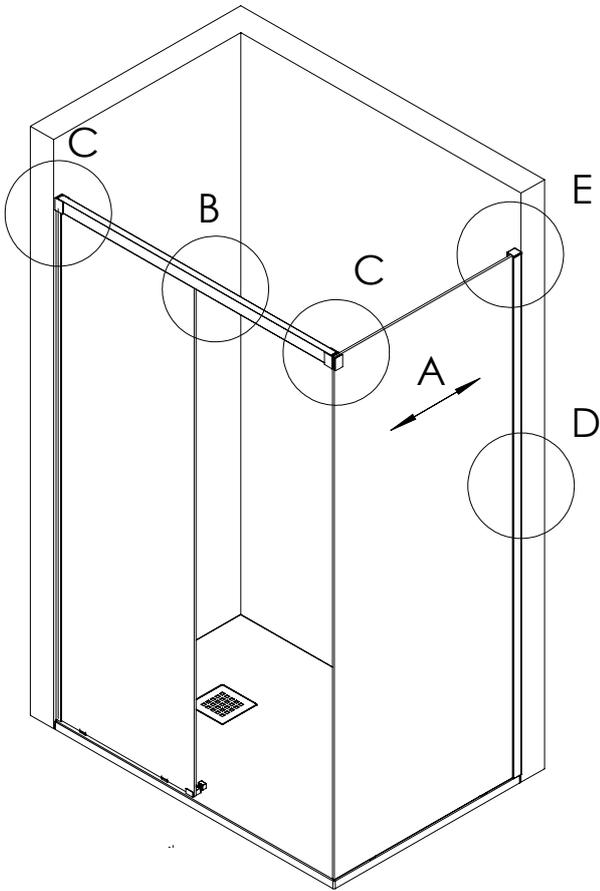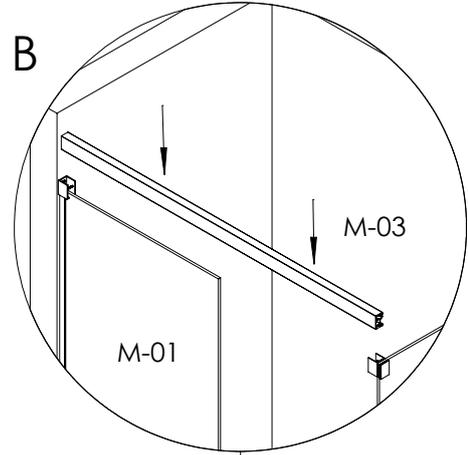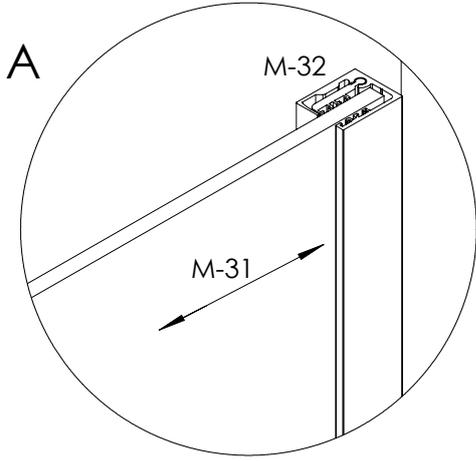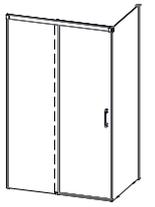


7

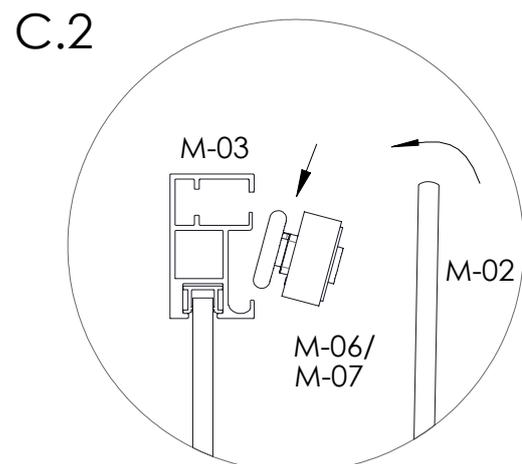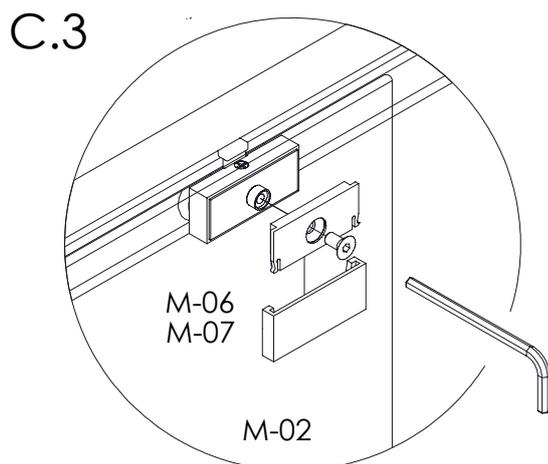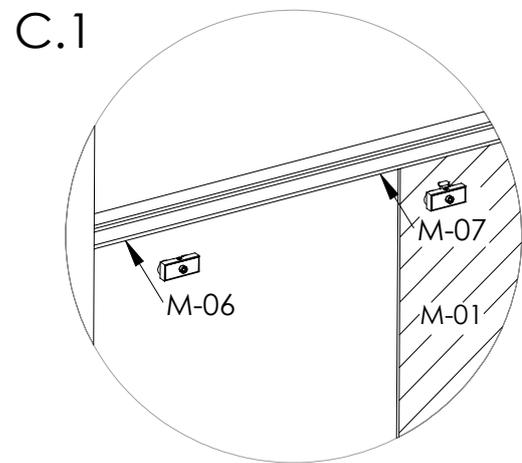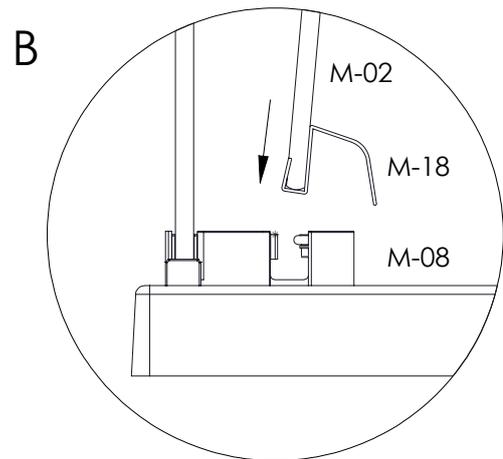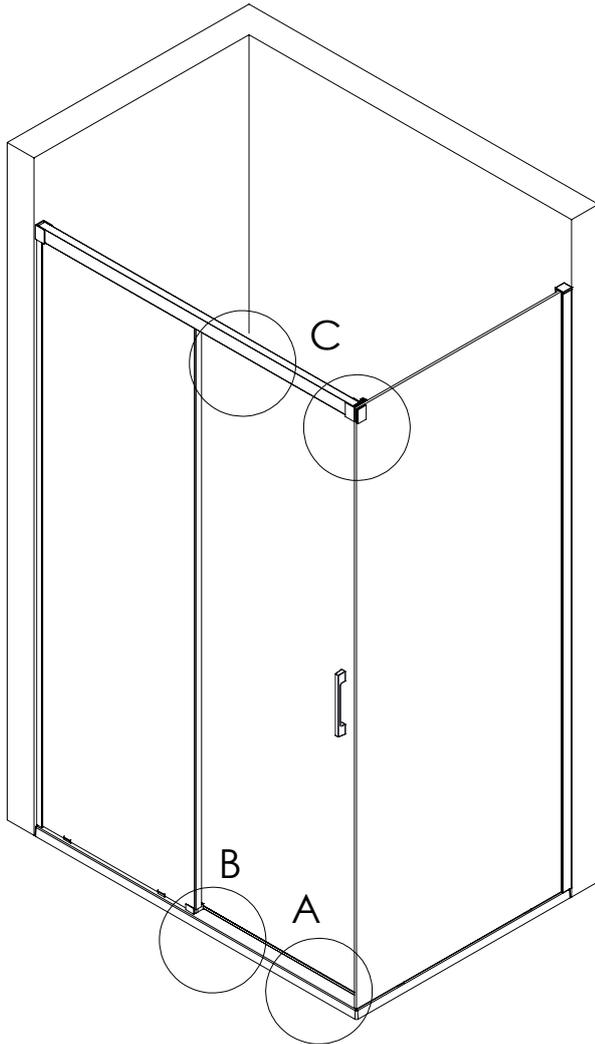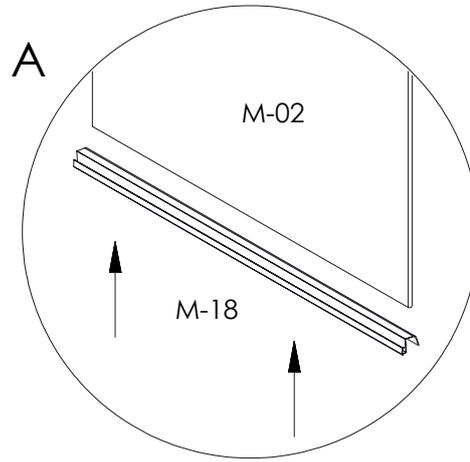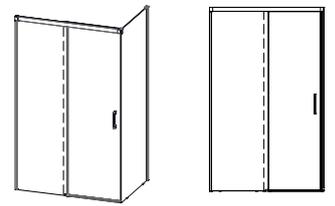


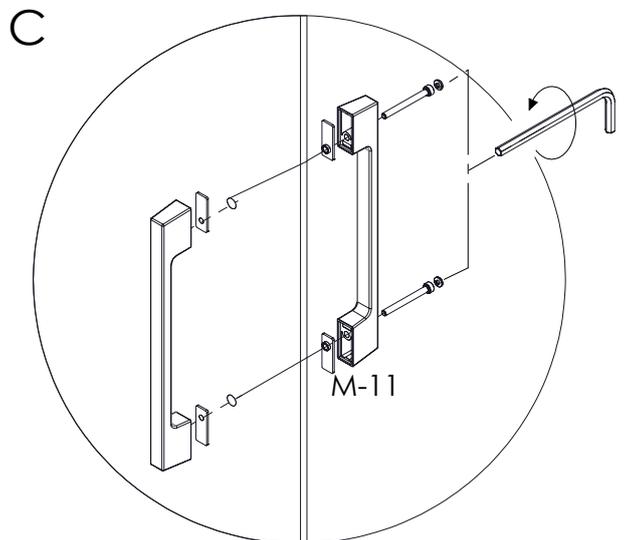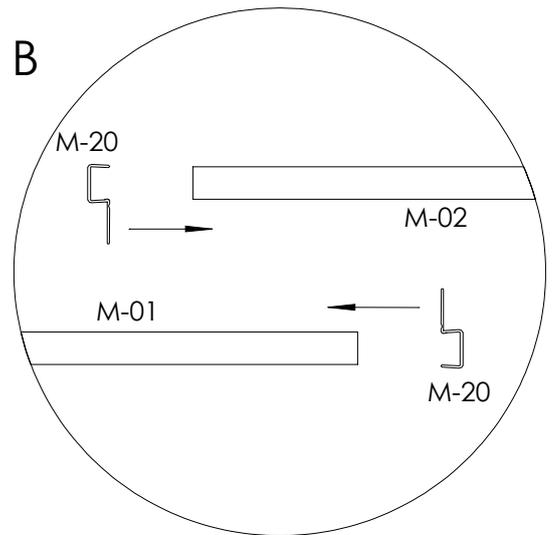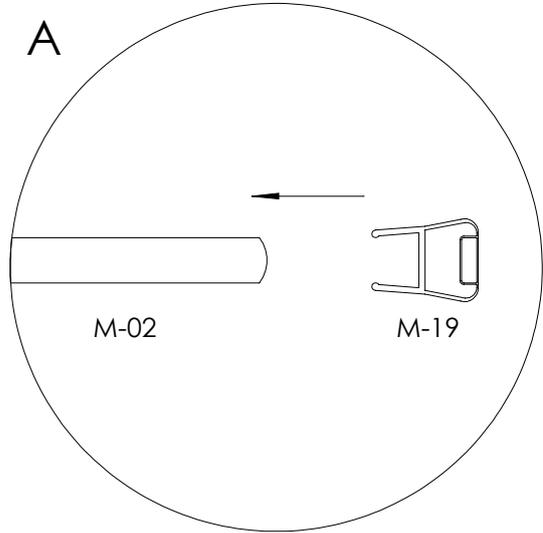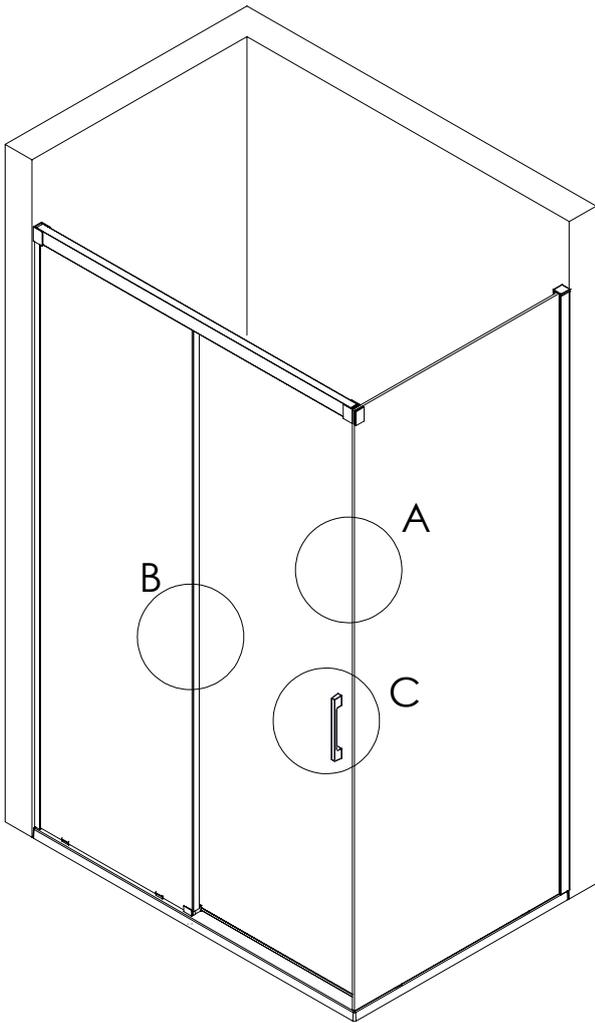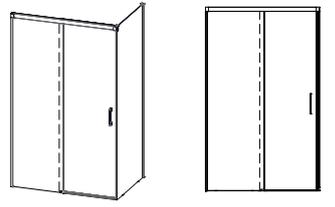


9

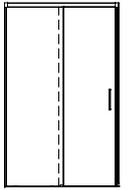


A.1

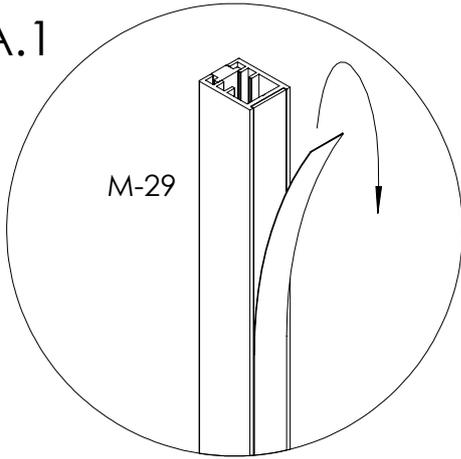


A.2

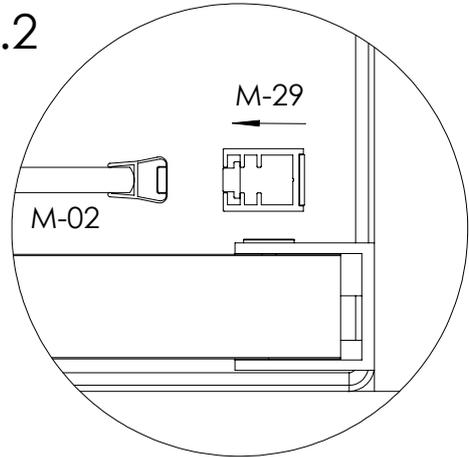


A.3

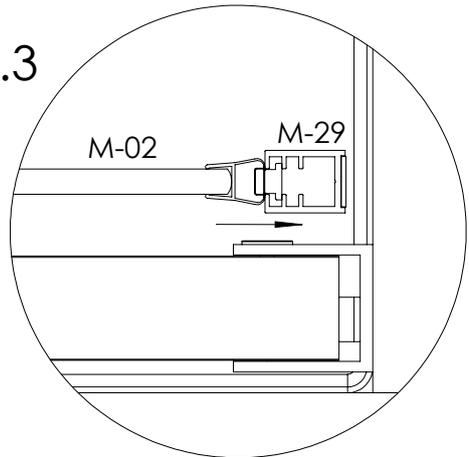


A.4

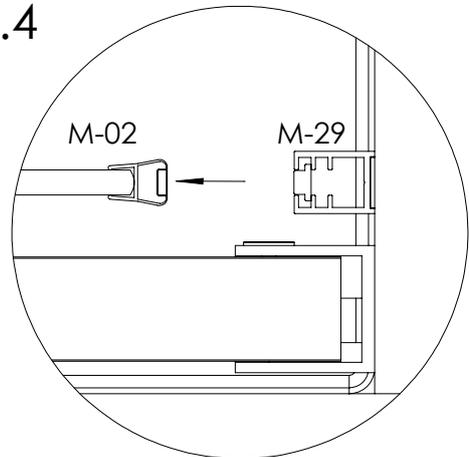


A.5

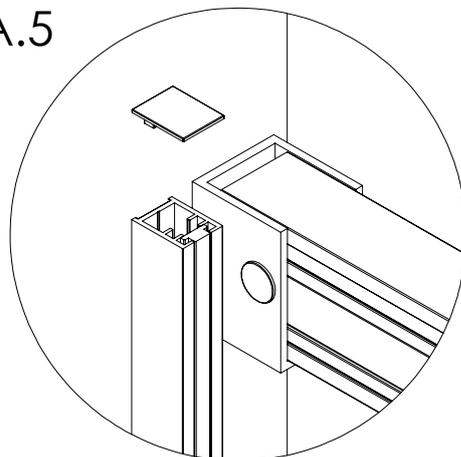


9

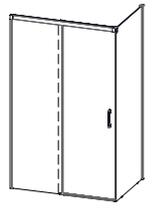


A.1

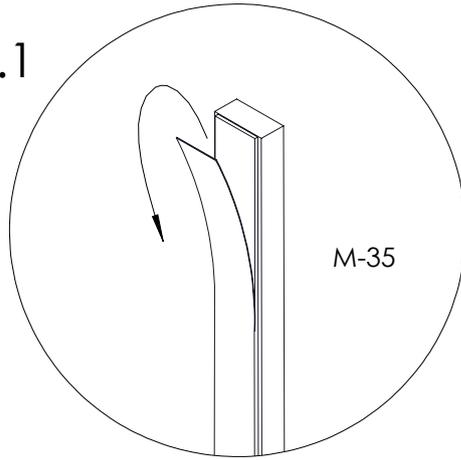



A.2

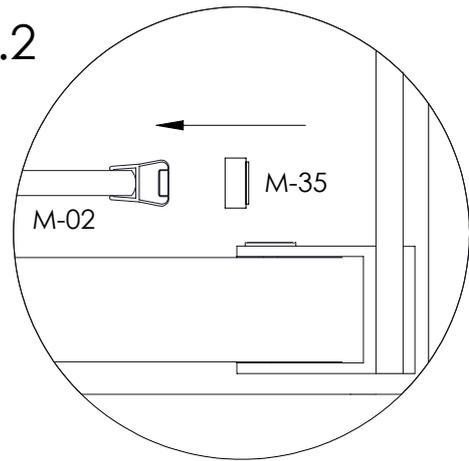







A.3

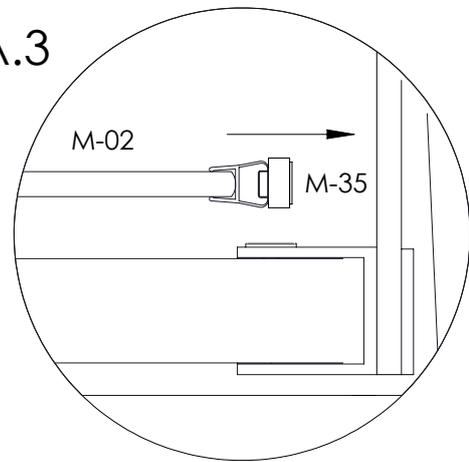


A.4

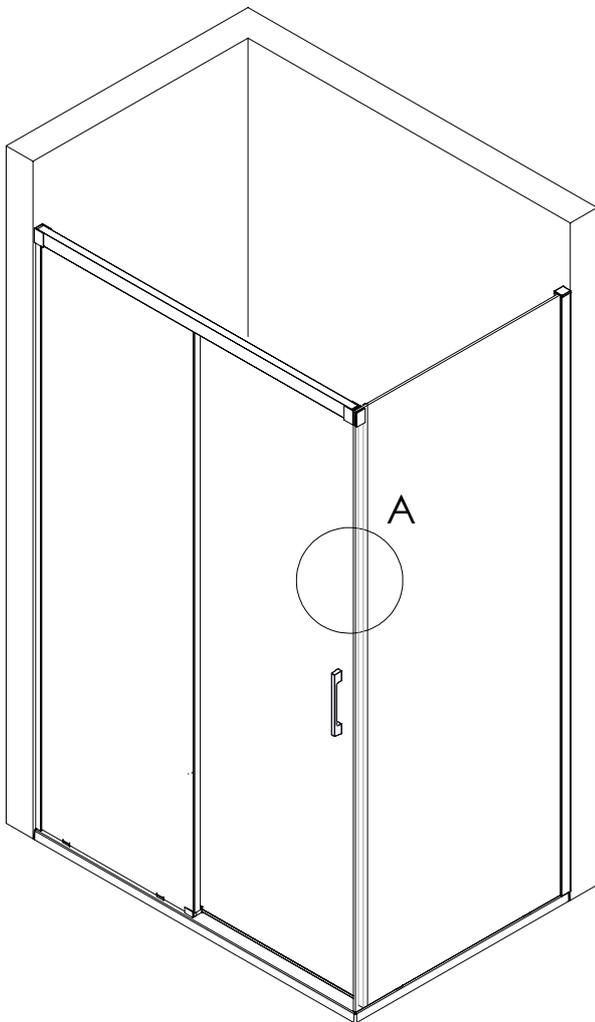
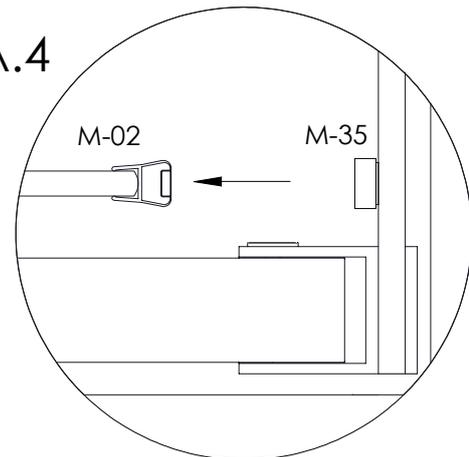


10

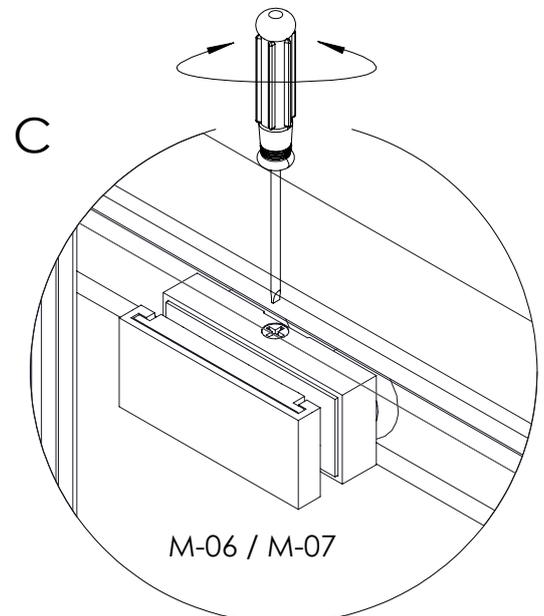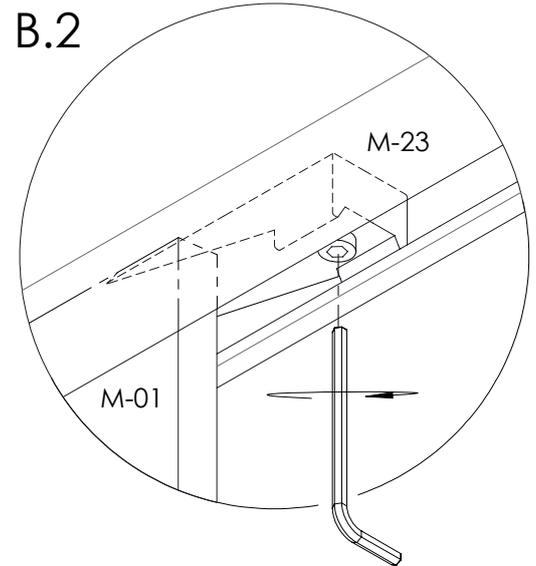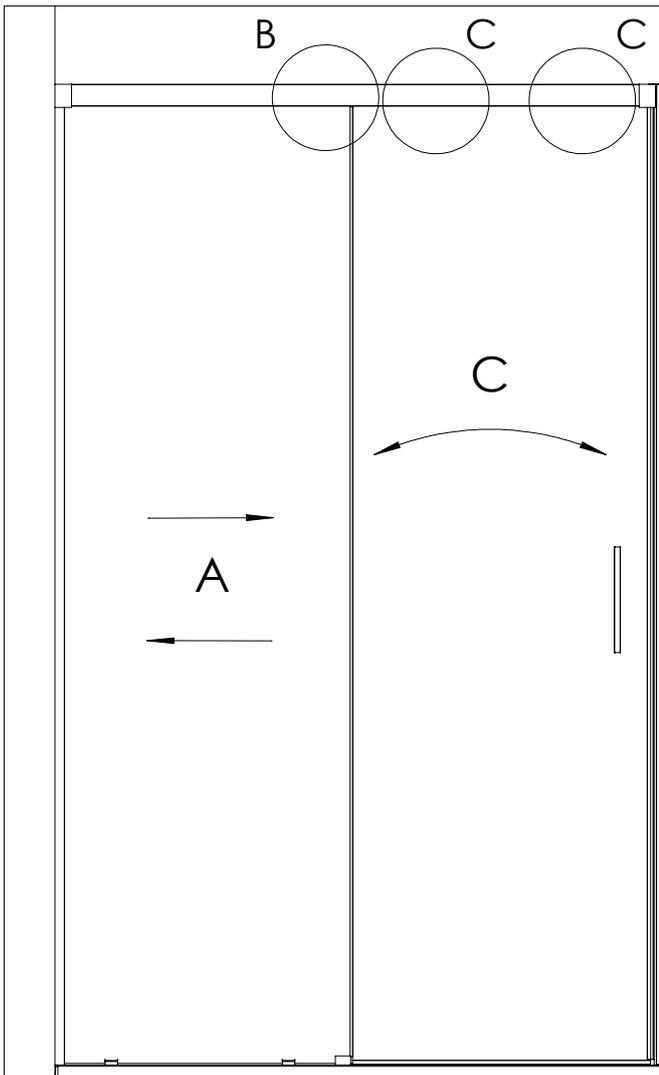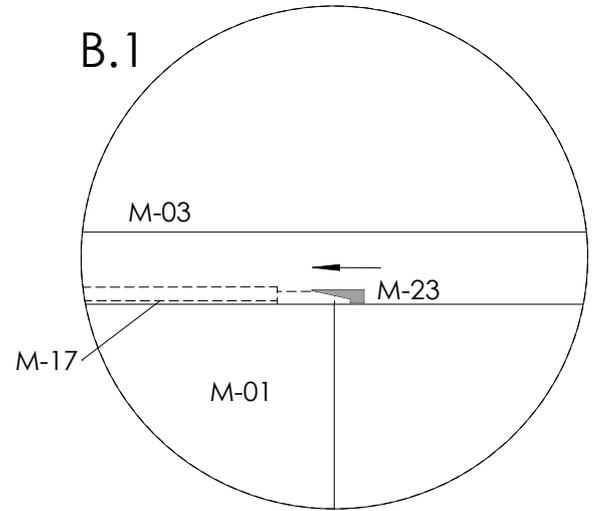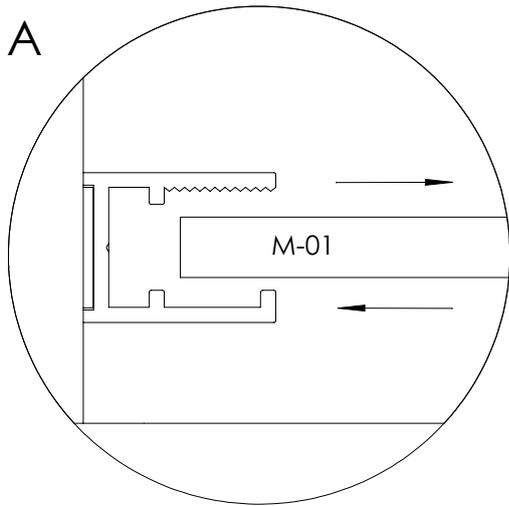
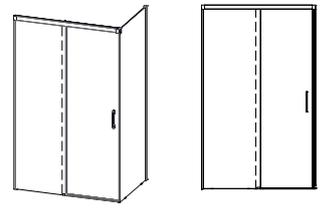


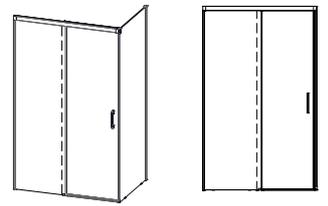


A.1





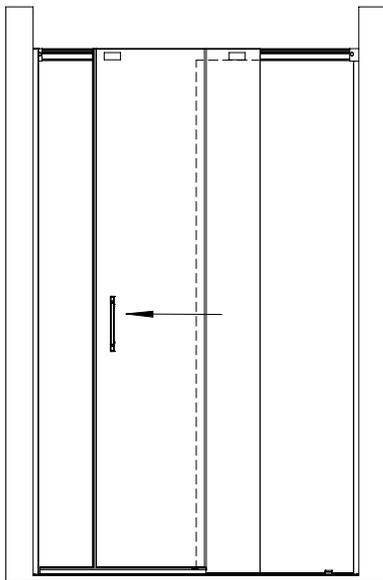
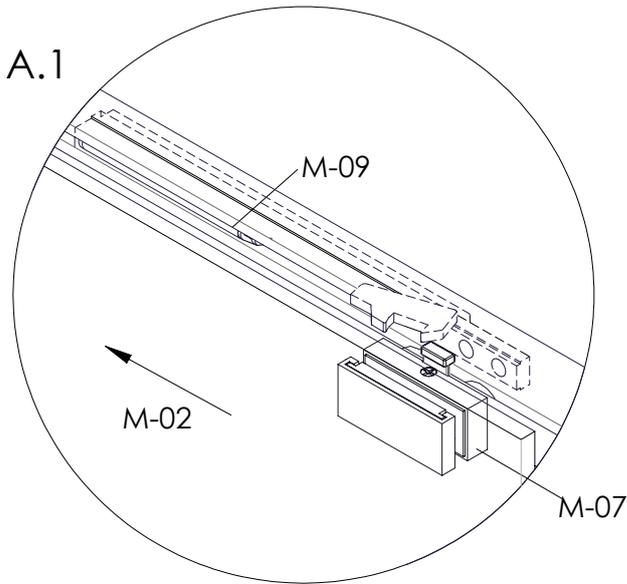


A.2






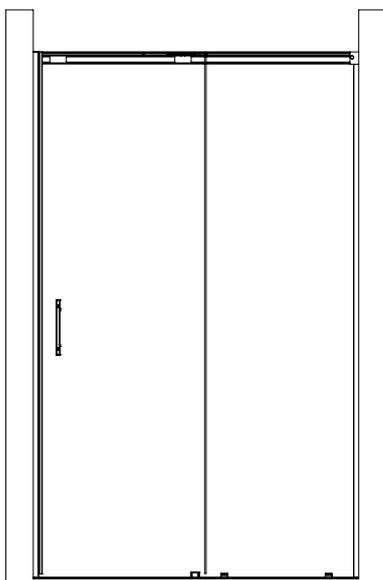
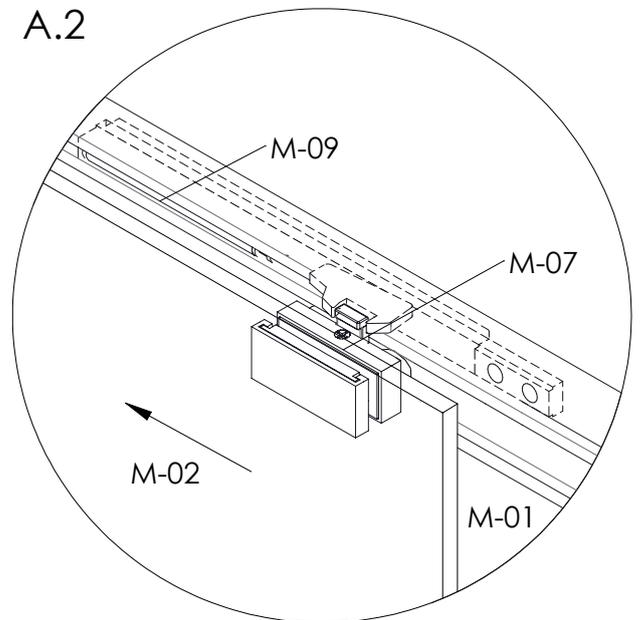




B

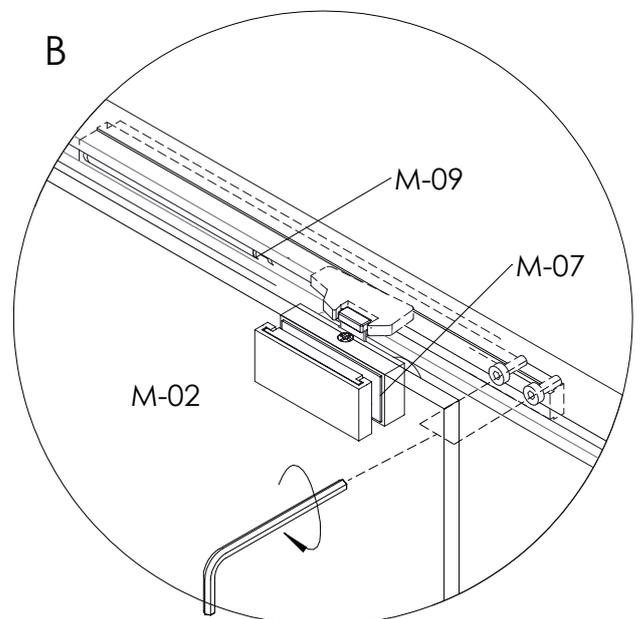

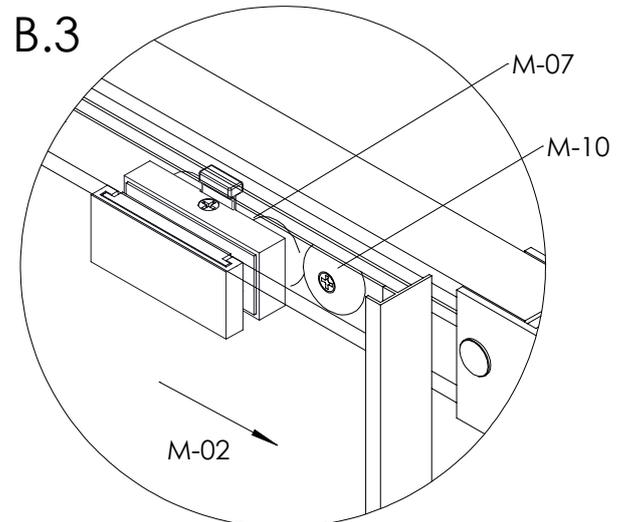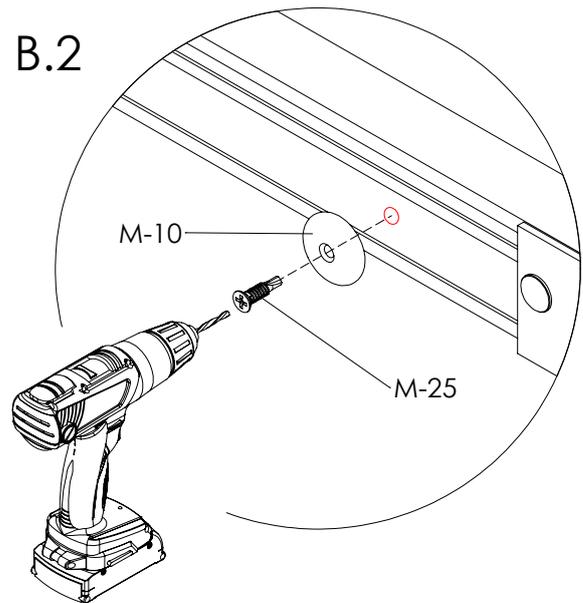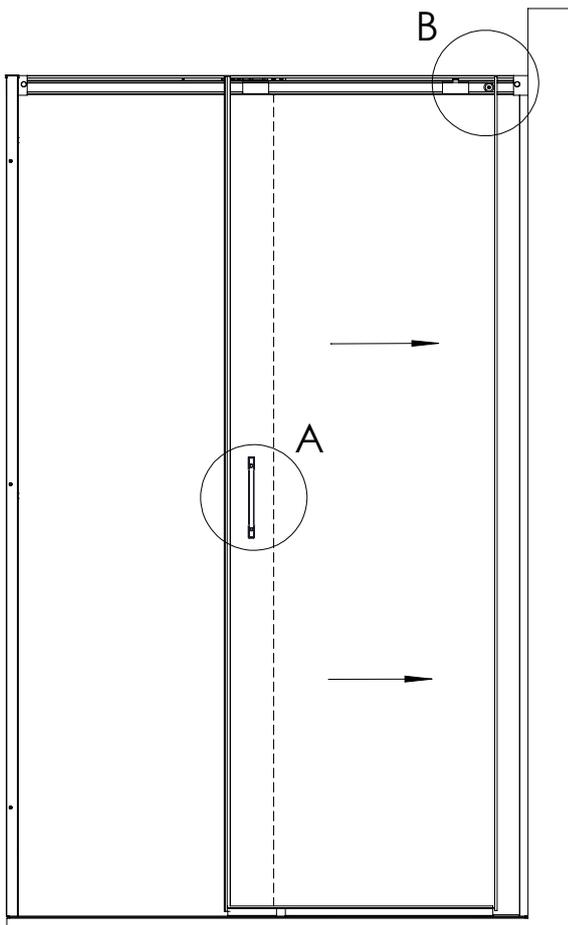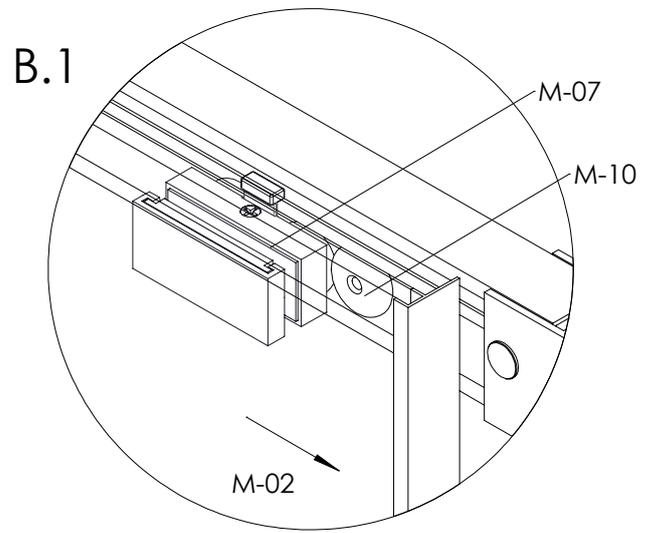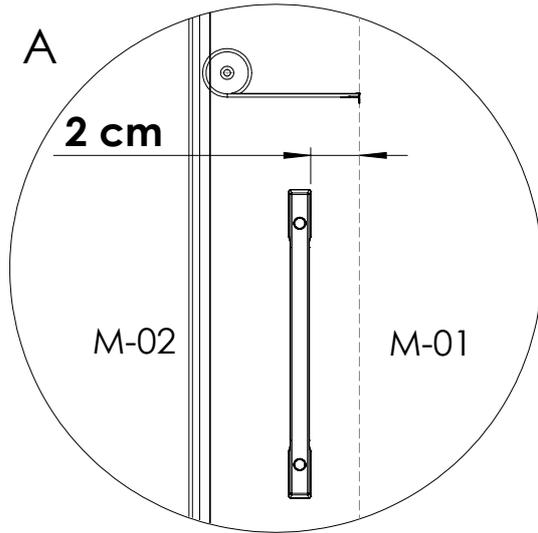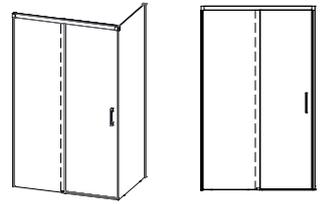


13

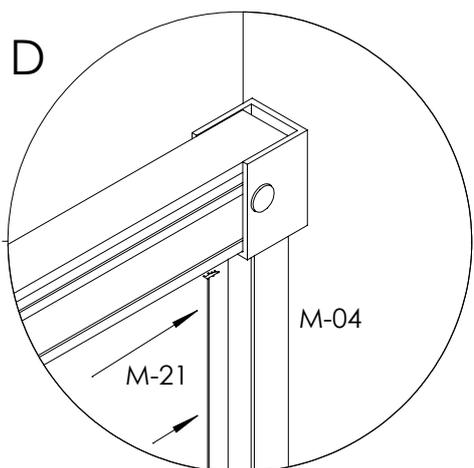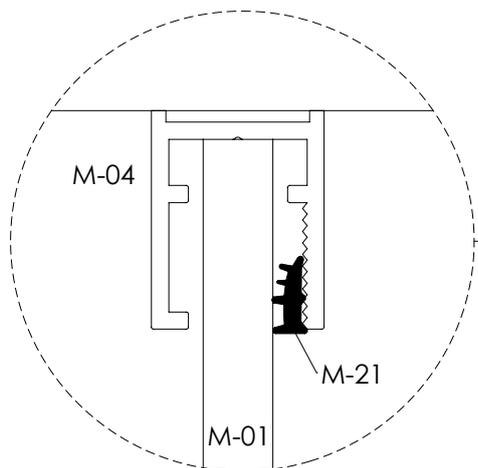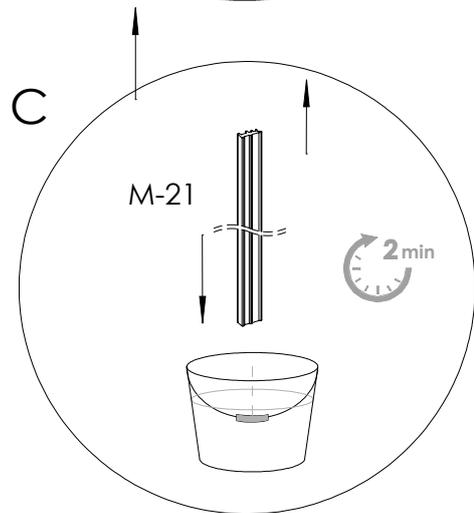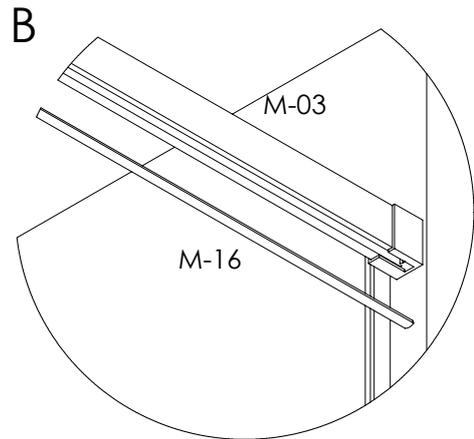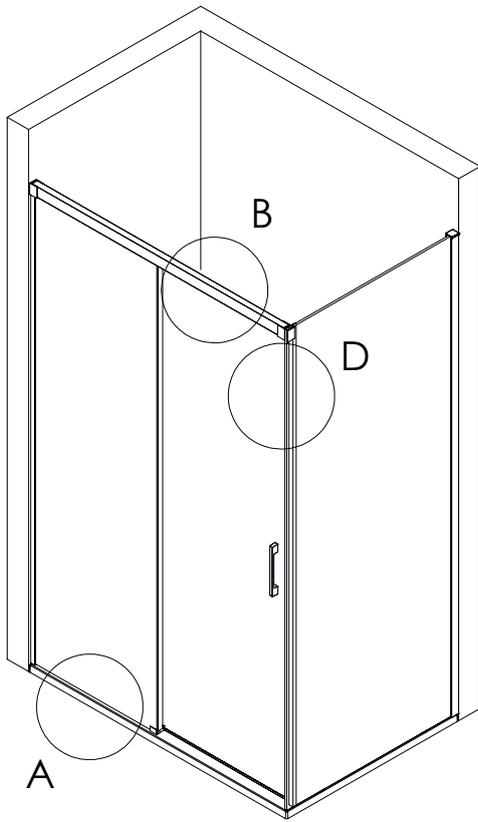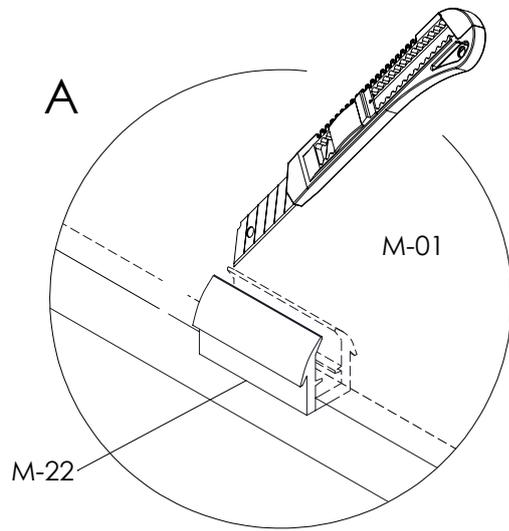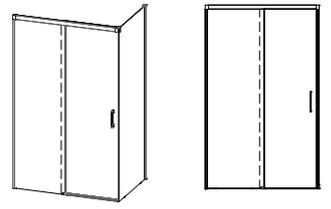


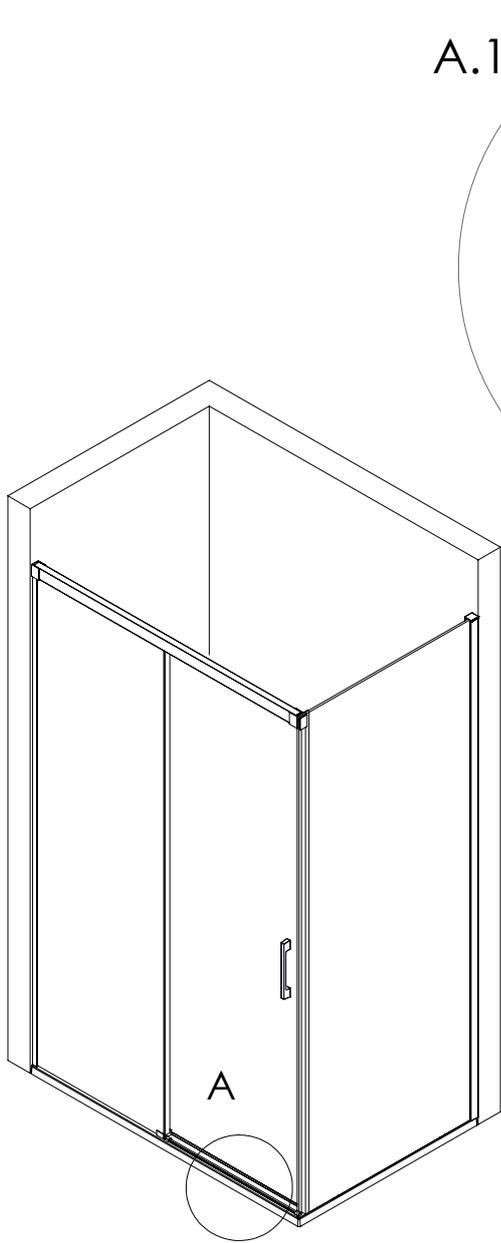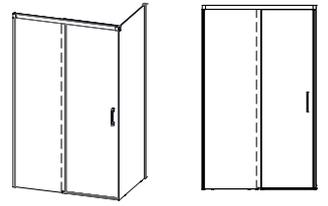


A.1

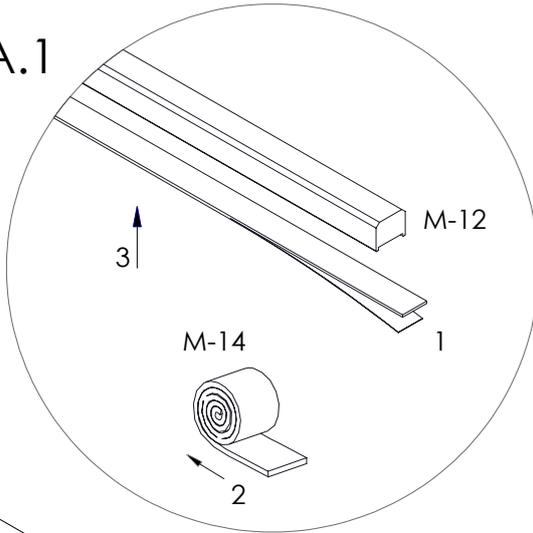


A.2

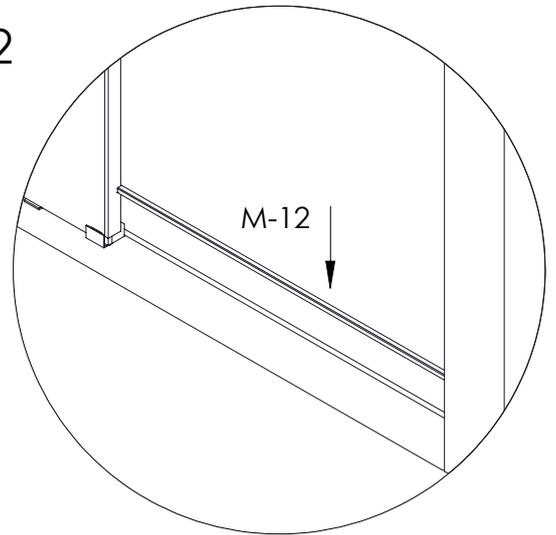

A.4

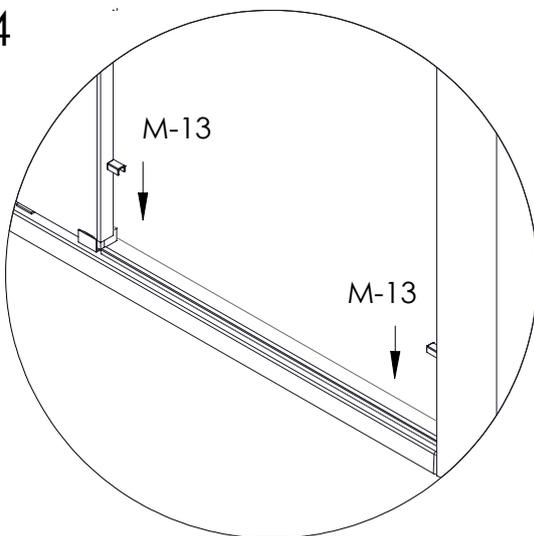

A.3

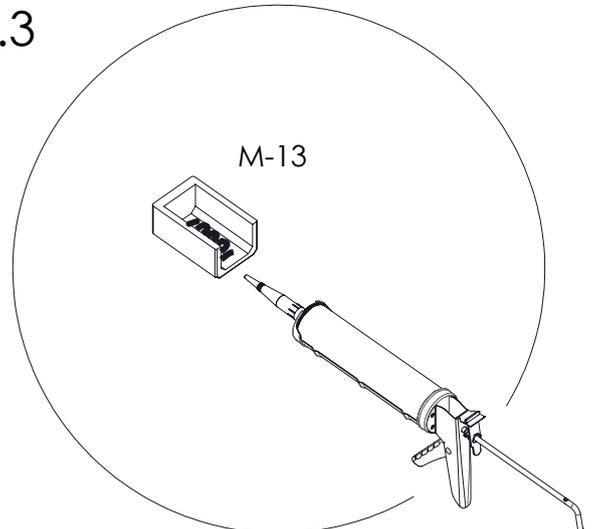

15

